



MA7 Quick Guide

 
Before We Get Started

Register Your Device

We strongly suggest that you register your device following the directions provided with the product. This will allow us to notify you when the latest firmware updates are available.


If You Need More Information:

Please refer to the included User Manual for more detailed and in-depth instructions on how to use this device, as well as answers to frequently asked questions.

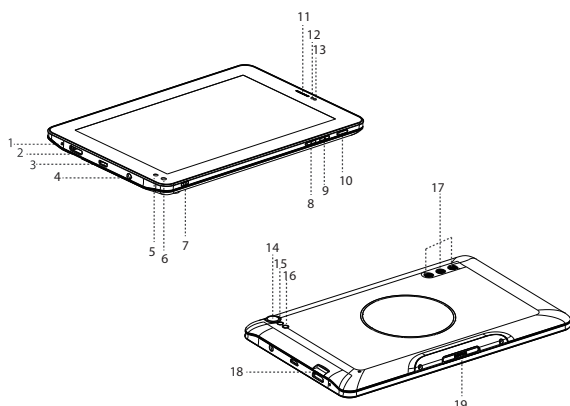


1. Microphone(tablet)
2. Mini HDMI Port
3. USB Port
4. Earphone Jack
5. IR1(transmit)
6. Front Camera
7. IR2(transmit and receive)
8. Volume Down Button
9. Volume UP Button
10. Power Button
11. Tablet Receiver
12. Proximity sensor
13. Light sensor
14. Rear Camera
15. Rear Camera Flash
16. IR3(transmit)
17. Speakers(Tablet)
18. Micro SD Card Slot
19. Dock Connection Interface

 20. Telephone Receiver/Handset
21. Speaker(Phone Set)
22. Flash key
23. Pause key
24. Redial key
25. Hands Free key
26. Indicator(Incoming Calls)
27. Phone Cord Jack
28. Numeric keypad
29. Ringtones Volume
30. Direct Current Input Jack
31. Landline Jack
32. Extension Cord Jack

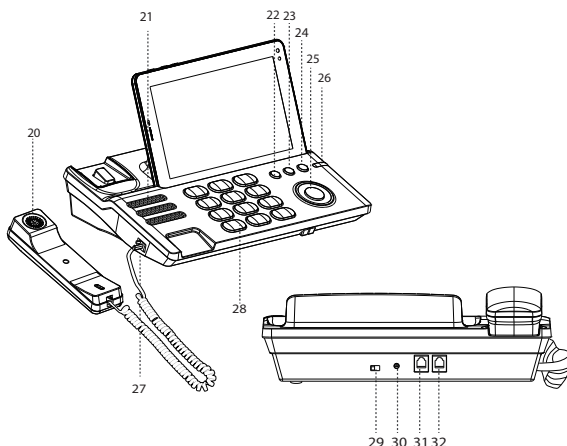


What's in the Box

 


USB Charger



 
HDMI Converter




USB Power Cable DC4.0

 

Earphone

 

Phone Line

 

Coiled Phone Cord



USB Data Cable

- Phone Handset
- Coiled Phone Cord
- USB Power Cable DC4.0
- USB Data Cable

 
- Tablet
- USB Charger
- HDMI Converter
- Phone Cord

- Earphone
- Dock Phone

Assembling Your TELPAD

Please refer to the figure:

Insert the tablet into dock, making sure the interfaces on the tablet and the phone set are properly aligned.

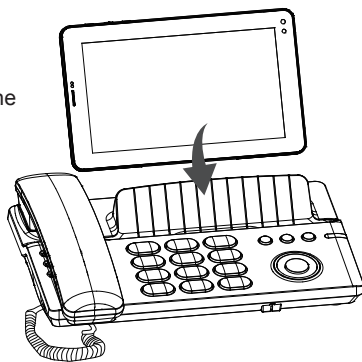

Connecting and Charging

Connecting the phone

 
- 1.Connect the DC power adapter and DC power adapter line.
- 2.Insert the power adapter line into the dock's power line jack.
- 3.Insert the DC power adapter into the power source/outlet.
- 4.Insert the phone line into the phone line jack and the unit's phone line socket.

Connecting Extensions

Connect the extension phone cord with the phone set into the extension cord jack.

Charging the Tablet Using the Dock

Connect the phone set to a power source. The Tablet will automatically charge once it is placed on the dock.

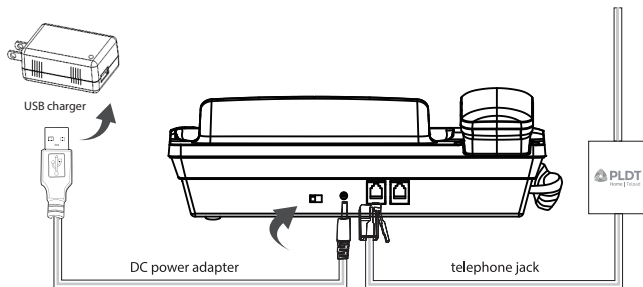

Charging the Tablet via a Personal Computer

 
Using the USB Cord, insert the smaller connecting head to the tablet and insert the other connecting head to the USB port of your personal computer/laptop. The tablet will automatically charge once it is connected.

Using the Physical Keys

Power Button

- Press and hold to power the Tablet on or off, or to restart Tablet.
- Press shortly to lock/unlock the screen.

Power button
Volume up
Volume down

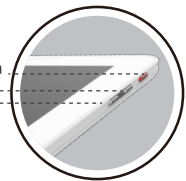

Volume Up/Down

- When the Tablet is ringing, press any of the volume buttons if you want to mute the ringer.
- On the Home screen, press to increase or decrease the ringtone volume, or set the Tablet to silent mode.
- When using other applications, press to control the volume of music, spoken directions, and other audio sounds.
- Press and hold to immediately adjust the ringtone volume to the maximum or minimum.

Working the Touchscreen Keys



Back

Touch to return to the previous screen.
Touch to exit from the running application.
If the on-screen keyboard is open, touch to close the keyboard.



Home

Touch to open the Home screen. It will bring you to the first panel of the Home screen.



Increase sound
Press to increase sound



Decrease sound
Press to decrease sound



Touch to open a list of thumbnail images displaying recently operated apps.
Touch the thumbnail image of the app to open it.
Navigation Touch and hold and flick off rightward to remove the app from the list.

Using the Touch Screen



Touch

By touching an item, you can select the item or launch it. For example:

- Touch the on-screen keyboard to insert text and/or characters.
- Touch an application icon to launch it.



Touch and Hold

Touching and holding items will activate them. For example:

- Touch and hold an application/widget to move it.
- Touch and hold on a field and a menu with options will pop up.



Drag

Touch and hold an item, move your finger on the screen to the target position.

- Dragging a shortcut icon to the trash will delete it.



Flick, Slide, Swipe

Change screens by flicking, sliding, and swiping your finger on the screen. For example:

- Slide your finger to unlock the screen
- Flick and/or swipe your finger to scroll the screen or menu, to move from screen to screen, or to view next object in the gallery.



Pinch

Using two fingers (like your thumb and index finger), pinching inward will cause the screen to zoom out; pinching outward will cause the screen to zoom in. For example:

- Pinch outward to see zoomed in details of a photo in Gallery.
- Pinch inward to zoom out and see the whole page of a browser.



TELPAD Mon Ami 7

- 3C
 - * Connect Home: PSTN / VOIP
 - * Control Home: 3D IR Remote Controller / Smart Controller
 - * Care Home
 - ※ Optional Smart Body temperature manager
- Quad core 1.6Ghz
- 7" IPS 1024X600
- 8GB Flash /1GB RAM
- Rear 3MP Camera/Front 0.3MP
- Home Control
 - * Control your home theater and other devices

We can support below devices:

TV
CABLES DSS
SAT VCR
CD RECEIVER

MUSIC AUDIO
DVD
PROJECTOR
AIRCON

DLNA

Connect the TELPAD and another device (which should have DLNA function) to Wi-Fi first, launch the DLNA function for both devices, then connect them by DLNA. Video and audio will be played on the receiver device normally without noise. Meanwhile, you can proceed with other operations on the TELPAD.

Exclusive Apps for Your TELPAD



knAPPsack

Get a whole range of comprehensive apps and services from the PLDT knAPPsack. Click on the PLDT knAPPsack icon to get access to Telpad apps like iflix for thousands of TV series and movies, Spinnr for music streaming, and Disney for fun and exciting games.



Home Control

The TELPAD 3D IR remote control works with devices that are already in your home. It can control your TV, Cable Box, Radio, DVD player, Blu-Ray DVD Player, DVR, VCR, CD player, Audio devices, even your Aircon. It supports thousands of supported manufacturer models and is continuously growing in supported devices. You can also control your home devices through your Android mobile phone by pairing it with your TELPAD. Lastly, use the reservation mode of the TELPAD to set specific times for your home devices to automatically turn on and off. Managing your home is made easy with the PLDT HOME Telpad.



Home Care

A Digital thermometer module can enable your TELPAD for body temperature measurement. You can keep history of your family temperature for a long time.

With Monthly view, you can monitor your average body temperature and keep your body healthy. Average body temperature of a healthy adult is 36.50-36.80°C. But, average daytime body temperature of a healthy adult is above 37°C. Cancer patients have low body temperature, usually less than 36°C. Basal body temperature (BBT) is our lowest temperature during rest, which is usually during the time we're sleeping. This is why, for accurate fertility charting, BBT should be taken before getting out of bed. Ovulation causes a one half to one-degree rise in BBT, so monitoring BBT helps provide information on the best time for conception.

Note: iFever Manager Dongle needed for this function is sold separately.



TELPAD MA7 Quick Guide

AURA Technology Limited

FLAT 810,8/F STAR HOUSE, 3 SALISBURY ROAD, TSIMSHATSUI, KOWLOON HONGKONG

E-mail: Support@auratech.hk

for Android™ Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.