

 


PLDT HOME REPEATER

Wireless-N Repeater

Quick Installation Guide Revision 1.0

2. Hardware Installation

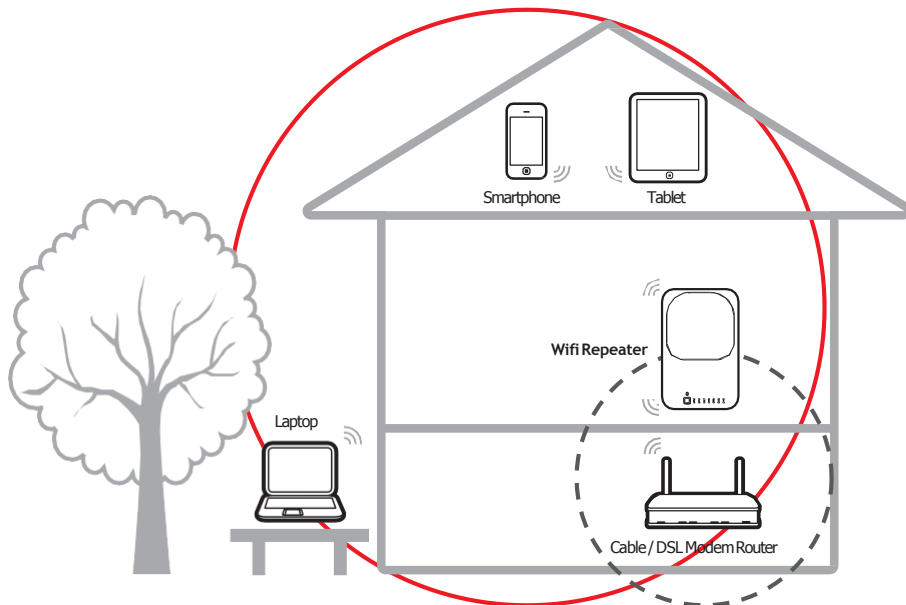


 Router WiFi Range  Wifi Repeater Range

Package Contents:

 - 1 x WiFi Repeater
- 1 x Quick Installation Guide

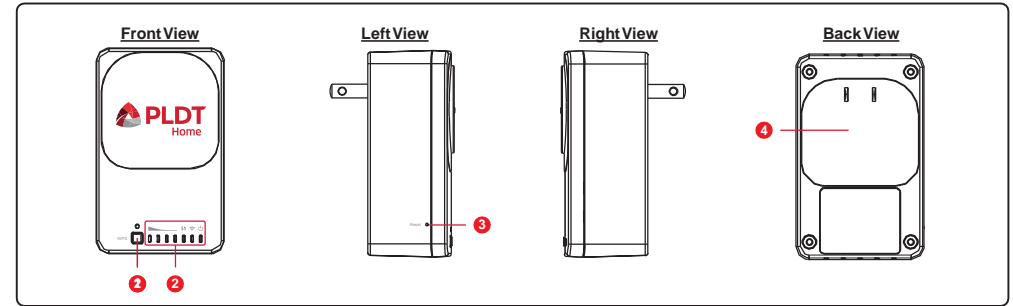


1. Overview



1 WPS : Press 1 second to trigger WPS function

3 Reset : Press 1 - 5 seconds to reboot Repeater.
Press > 5 seconds to reset to factory default and reboot.

2 LED Indicators:

-  Power : On - Power On
Off - Power Off
-  WLAN : On - Wireless turn On
Off - Wireless turn Off
-  WPS : On - WPS feature turn On
Off - WPS feature turn Off
Blinking - WPS triggering
- Signal Strength : 1 LED On : Low Signal
2 LEDs On : Medium Signal
3 LEDs On : Good Signal
4 LEDs On : Excellent Signal




4 AC Power Input

Note:


The illustration in this document may appear different from your model.

3. Connecting to the Root AP

Method 1 : With WPS button

Step 1. Plug the Wifi Repeater into the electrical socket and power on the electrical socket. The Power LED  on Wifi Repeater will illuminate. Wait until the WLAN  and WPS  LEDs light up.

Step 2. Press the Wi-Fi Protected Setup (WPS) button on your wireless router or root AP.


Step 3. Press the WPS button of Wifi Repeater for 1 second until the WPS  LED starts to blink.



Note 1. The Signal Strength LEDs will illuminate to show the link quality once connected to the root AP.


Note 2. Both buttons must be pressed within 2 minutes.

LOCATION 1

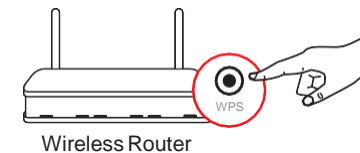

2 seconds

LOCATION 2

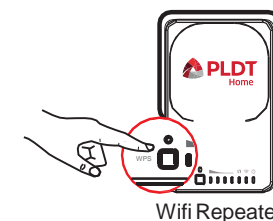

1 second



Within 2 Minutes

3. Connecting to the Root AP

Method 2 : With Web Configuration

Step 1. Connect your computer to Wifi Repeater via wireless.

The wireless network (SSID) shall appear as "PLDTHOMEREPEATER".



Note: The Wi-Fi Key or password can be found on the label pasted on Wifi Repeater.

Step 2. Open web browser and type <http://192.168.1.253> in the browser's address box. This is the default IP address for Wifi Repeater.

The default user name is "admin" and password is "1234".

Repeater Login

User Name: admin

Password: [masked] [Display]

Login

Step 3. Click on Quick Setup Wizard -> Start

Quick Setup Wizard

Start

Quick Setup Wizard

The quick setup will guide you to configure the basic network parameters. To continue, please click the "Next" button.

Manual Next

Click <Next>, the repeater will scan and find the available wireless network.

3. Connecting to the Root AP

<input checked="" type="radio"/>	PLDTHOMEDSL	90:61:0C:10:5E:3A	100%	11	TKIPAES	WPA-PSK, WPA2-PSK
<input type="radio"/>	PROLINK_IPCAM	90:61:0C:01:5E:82	70%	11	AES	WPA2-PSK
<input type="radio"/>	PROLINK_store	00:12:0E:E6:86:B8	50%	11	AES	WPA2-PSK
<input type="radio"/>	PROLINK_PRN2001_TEST	90:61:0C:0C:83:7C	86%	11	AES	WPA2-PSK
<input type="radio"/>	PROLINK_PWH2004_test	00:12:0E:BA:17:EC	91%	11	AES	WPA2-PSK
<input type="radio"/>	PROLINK_WNR1004_8b75_test	90:61:0C:08:BF:75	65%	11	AES	WPA-PSK
<input type="radio"/>	jjaying	00:22:6B:E2:4C:6D	5%	11	WEP	Unknown
<input type="radio"/>	WNR1009_testing	90:61:0C:01:0C:62	96%	11	AES	WPA2-PSK

Back Rescan Next

Select the wireless network or root AP that you want to connect to, and click on <Next>.

Quick Setup Wizard

Extender SSID: PLDTHOMEREPEATER

Selected Root AP SSID: PLDTHOMEDSL

Root AP MAC Address: 90:61:0C:10:5E:3A

Wireless Security: WPA2-PSK

Wireless Password: PLDTWIFxxxxx

(The length of WPA-PSK/WPA2-PSK password should be 8 - 63 ASCII or 64 HEX characters; for WEP-64 must be 5 or 10 characters and WEP-128 need to set 13 or 26 characters.)

Back Next

Key in the wireless password of the wireless router or root AP, and click on <Next> to proceed.

3. Connecting to the Root AP

Quick Setup Wizard

Operation Mode: Wireless Extender

Root AP SSID: PLDTHOMEDSL

Root AP MAC Address: 90:61:0C:10:5E:3A

Extender SSID: PLDTHOMEREPEATER

Wireless Security Mode: WPA2PSK

Wireless Password: PLDTWIFxxxxx

Back Finish

Important:

Please obtain the wireless password from the owner of the wireless router or root AP.

The repeater will not able to connect to the wireless router or root AP if the password is incorrect.

Check and confirm if the information are correct.

Click <Finish> and the Wifi Repeater will attempt to connect to the root AP.



Note: The Signal Strength LEDs will illuminate to show the link quality once connected to the root AP.

Wireless Password History

-
-
-
-
-