



TELPAD MA7R

1	GETTING STARTED	01
1.1	About Your TELPAD	02
2	TELPAD INTRODUCTION	03
2.1	Getting to Know Your TELPAD	04
2.2	Product Specification	07
2.3	Installation	10
2.3.1	Basic Installation	10
2.3.2	Docking and Undocking the Tablet	11
3	TABLET FUNCTIONS	12
3.1	Turning the Tablet ON or OFF	13
3.1.1	Turning the Tablet ON	13
3.1.2	Turning the Tablet OFF	13
3.2	Charging the Battery	14
3.2.1	Charging the Tablet Battery	14
3.3	Working with the Keys	15
3.3.1	Using the Physical Keys	15
3.3.2	Working the Touchscreen Keys	15
3.4	Using the Touch Screen	16
3.5	Home Screen	17
3.5.1	Getting to Know the Home Screen	17
3.5.2	Extending Home Screen	18
3.5.3	Customizing the Home Screen	18
3.6	Locking and Unlocking the Screen	19
3.6.1	Locking the Screen	19
3.6.2	Unlocking the Screen	19
3.6.3	Setting up a Screen Lock	19
3.6.4	Setting up a Screen Timeout Period	19
3.7	Inputting Text	20
3.7.1	Entering Text Using the On-screen Keyboard	20
3.7.2	Cutting or Copying Text	21

3.8	Opening and Switching Applications	22
3.9	Accessing the Tablet's Settings	22
3.10	Languages & Input Method & Account Setting	23
3.11	Setting the Date and Time	24
3.11.1	To Automatically Set Date and Time	24
3.11.2	To Manually Set Date and Time	24
3.12	Installing or Removing the Micro SD Card	25
3.13	Connecting to or Disconnecting from Computer Using USB	26
3.14	Connecting the Tablet to a TV	27
3.15	Wireless Networks	28
3.15.1	Opening Wi-Fi Settings	28
3.15.2	Turning Wi-Fi ON or OFF	28
3.15.3	Connecting to a Wi-Fi Network	29
3.15.4	Turning Open Network Notification ON or OFF	29
3.15.5	Adding a Wi-Fi Network	29
3.15.6	Forgetting a Wi-Fi Network	29
3.16	Bluetooth	30
3.16.1	Opening Bluetooth Settings	30
3.16.2	Turning Bluetooth ON or OFF	30
3.16.3	Changing the Bluetooth Name of Your Tablet	30
3.16.4	Connecting to Bluetooth Devices	31
3.16.5	Disconnecting from or Unpairing a Bluetooth Device	31
3.17	Google Services	32
3.17.1	Creating a Google Account	32
3.17.2	Using Play Store	33
3.17.3	Backing up and Restoring Apps and Settings from a Google Account	34
3.18	Gmail	35
3.19	Camera Instructions	36
3.20	Home Control	39
3.20.1	Installation of "Home Control" APK	41

 
 
3.20.2 IR Universal Remote Initial Configuration	-41
3.20.3 IR Learning	-43
3.20.4 Reservation	-44
3.20.5 Reservation Setup	-45
3.20.6 Out Home Control	-46
3.20.7 Motion Detection	-50
3.21 Home Care	-52
3.22 FamChat	-60
3.23 DLNA	-66
3.23.1 DLNA Introduction	-66
3.23.2 DLNA Functions	-66
3.23.3 Control Device Discovery and Connection	-67
3.23.4 The Brief Introduction of Interactions between Tablet and Mobile Phone	-70
4 THE CONNECTION BETWEEN DOCK PHONE AND TABLET	-80
4.1 Dialer	-81
4.1.1 Call Log	-82
4.1.2 Contacts	-82
4.1.3 Favorites	-82
4.1.4 Settings	-82
4.1.5 Account Synchronous	-84
4.1.6 Black List / White List / Do Not Disturb	-85
4.2 Smart Dialer	-86
5 BASIC TROUBLESHOOTING FOR THE TELPAD	-87
5.1 Tablet not Powering up	-88
5.2 No Dial Tone	-88
5.3 Distorted Audio on Speaker	-88
5.4 Tablet Dialler cannot Make a Call	-88
5.5 No Audio Response in the Handset	-88
6 FAQs	-89
7 WARNINGS AND PRECAUTIONS	-94

8 PERSONAL INFORMATION AND DATA SECURITY	-99
9 LEGAL NOTICE	-101
10 DISCLAIMER OF WARRANTIES	- 103
11 INDEX	-105


1.1 About Your TELPAD

The TELPAD is the world's first landline, broadband, and tablet in one—a device that not only gives you access to basic communication services, but also brings to your home a world of productivity and entertainment. The TELPAD is powered by Android, the world's leader in smartphone technology. With its stunning 7 inch touchscreen display, built-in camera & Wi-Fi, access to hundreds of thousands of free and paid Android Apps, as well as its infrared remote controller and wi-fi smart appliance controller, the TELPAD is definitely the ideal control and communication center of your home!


2.1 Getting to Know Your TELPAD

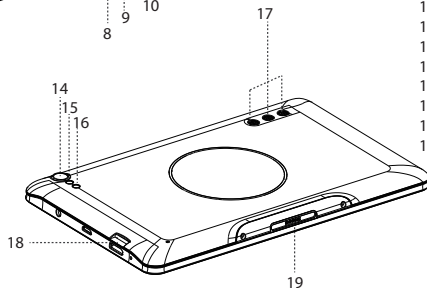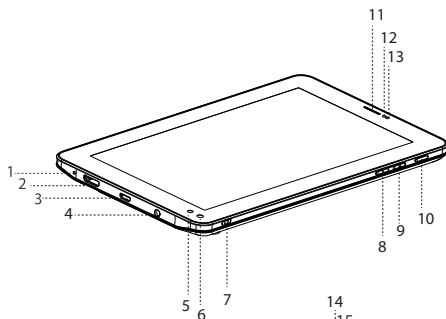

 
1. Microphone Tablet
2. Mini HDMI Port
3. USB Port
4. Earphone Jack
5. IR1(transmit)
6. Front Camera
7. IR2(transmit and receive)
8. Volume Down Button
9. Volume UP Button
10. Power Button
11. Tablet Receiver
12. Proximity Sensor
13. Light Sensor
14. Rear Camera
15. Rear Camera Flash
16. IR3(transmit)
17. Speakers(Tablet)
18. Micro SD Card Slot
19. Dock Connection Interface

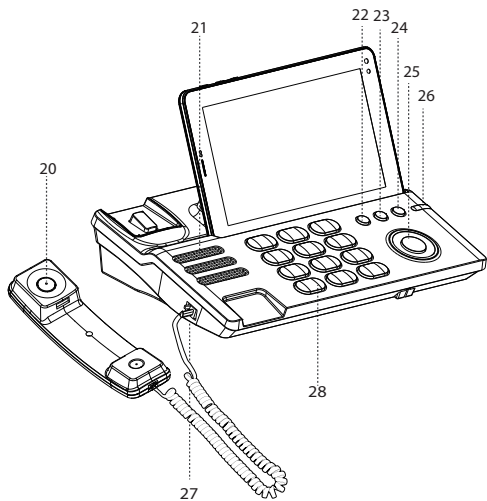

 - 20. Telephone Receiver/Handset
- 21. Speaker(Phone Set)
- 22. Flash Key
- 23. Pause Key
- 24. Redial Key
- 25. Hands Free Key
- 26. Indicator(Incoming Calls)
- 27. Phone Cord Jack
- 28. Numeric Keypad
- 29. Ringtones Volume
- 30. Direct Current Input Jack
- 31. Landline Jack
- 32. Extension Cord Jack

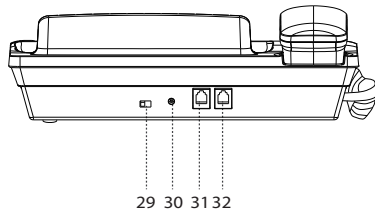


Accessories

 

USB Charger



 
HDMI Converter



USB Power Cable DC4.0



 Phone Line



Coiled Phone Cord



USB Data Cable



Earphone

2.2 Product Specification

GENERAL SPECIFICATIONS AND DISPLAY

DIMENSION	189mm x 115 mm x 11 mm
DISPLAY AND RESOLUTION	7 Inch IPS (1024X600)
SYSTEM SOFTWARE	Android™ 7.1.1
AIR INTERFACE	Wi-Fi - 802.11b/g/n
MULTI-TOUCH PANEL	Capacitive 5-Points-Touch
PRIMARY KEYPAD	3 Standard Soft Keys: Home, Back, Recent Applications
DISPLAY COLOR DEPTH	24-bit
Camera	Rear 5MP camera/front 2MP

CONNECTIVITY

BLUETOOTH	Bluetooth 4.0 + EDR
USB	Micro USB OTG x 1EA/USB Host x 1EA for MEP Dock
DIGITAL TV OUT	HDMI V 1.4/ Supports 3D output
SPEAKER	1Watt x 1EA
MICROPHONE	Built-in-microphone
SENSOR	3-Axis Accelerometer for UI Auto Rotate Ambient Light sensor
AUDIO OUT	Standard 3.5 mm headphone jack

HANDSET

PSTN Support (POTS)	RJ9 (4P4C)
SPEAKER	Built-in
MICROPHONE	Built-in

SMART DIALER

PSTN	Call Hold
	Speed Dial
	Speaker
	Volume Adjustment

COMMUNICATION AND ORGANIZER

EMAIL	Protocols: SMTP, POP3 and IMAP4
	Supports Exchange Calendar, Contacts synchronous

MEDIA PERFORMANCE

VIDEO DECODING	3GPP2, 3GPP, TS, 3GP, VOB, AVI, MP4, FLV, WMV, MKV
AUDIO DECODING	AAC, AMR, APE, FLAC, MID, MP3, OGG, WAV, WMA
PICTURE FORMATS	JPEG, JPG, BMP, PNG
STREAMING MEDIA	RTSP/HTTP, Support Download play, Progressive play

BATTERY AND POWER

TABLET BATTERY	STD Lithium-Ion Polymer battery, 4100 mAh rechargeable
POWER ADAPTER	Input - 100 -240 Vac, Output – 5V DC/2.5A 12.5 W


HOME CONNECT AND CONTROL

DLNA	Built-in eHomeMediaCenter application
Home control	infrared universal remote,Reservation, Outside Home Control, motion detection
Home Care	Body Temperature Monitor,Family Temperature Manager, Menstrual Cycle,Fertility State

2.3 Installation

2.3.1 Basic Installation

 Before installing or removing the adapter, telephone line, ensure the tablet is off the dock.

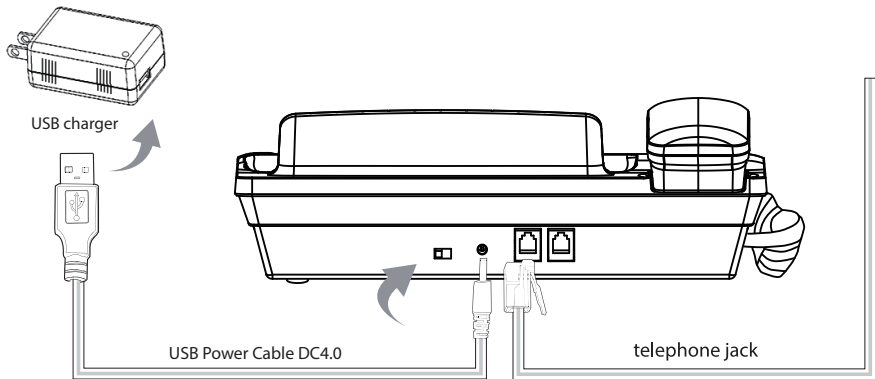


2.3.2 Docking and Undocking the Tablet

To install the tablet on to the dock, refer to the following figure.



 To remove the tablet from the dock, do as shown in this figure.

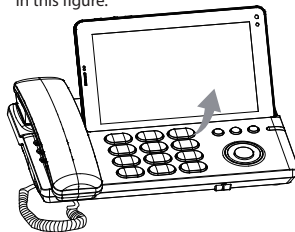

3.1 Turning the Tablet ON or OFF

 
3.1.1 Turning the Tablet ON

To turn on our tablet, press the Power key.

Notes: Before turning on your tablet, please make sure there is at least 5% battery capacity reserved in your tablet.

3.1.2 Turning the Tablet OFF

1. Press and hold Power key to open the Tablet options menu.
2. Choose Shut Down.
3. Touch OK to confirm shutdown.

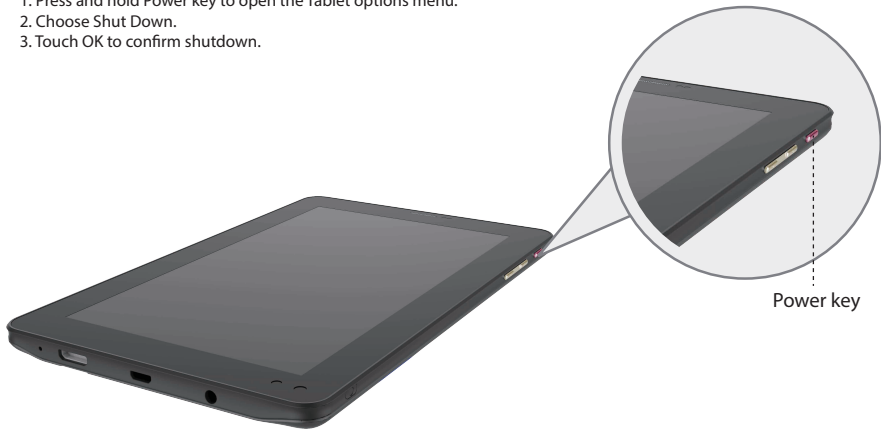


3.2 Charging the Battery

3.2.1 Charging the Tablet Battery

The Tablet is powered by a rechargeable Li-ion battery. There are two ways to charge the Tablet:

 1. Place the Tablet on the dock with the power cord supplying power to the dock.
2. Turn the Tablet off, and connect the Tablet to adapter using a USB cable.

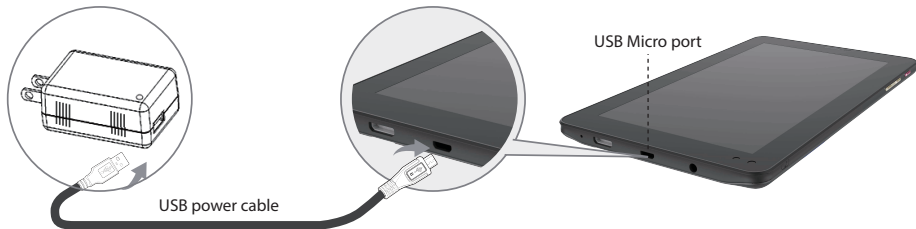

3.3 Working with the Keys

 
3.3.1 Using the Physical Keys

Power

- Press and hold to power the Tablet on or off or restart the tablet.
- Press shortly to lock/unlock the screen.

Volume up/down

- When the Tablet is ringing, press any of the volume buttons if you want to mute the ringer.
- On the Home screen, press to increase or decrease the ringtone volume, or set the Tablet to silent mode.
- When using other applications, press to control the volume of music, spoken directions, and other audio sounds.
- Press and hold to immediately adjust the ringtone volume to the maximum, or minimum.

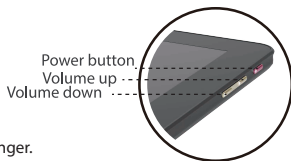

3.3.2 Using the Touchscreen Keys

Back



- Touch to return to the previous screen.
- Touch to exit from the running application.
- If the on-screen keyboard is open, touch to close the keyboard.

Home



- Touch to open the Home screen. It will bring you to the first panel of the Home screen.

Navigation



- Touch to open a list of thumbnail images displaying recently operated apps.
- Touch the thumbnail image of the app to open it.
- Touch and hold and flick off upward or downward to remove the app from the list.



- Volume Up
Press to increase sound



- Volume Down
press to decrease sound

3.4 Using the Touch Screen



Touch

By touching an item, you can select the item or launch it. For example:

- ☉ Touch the on-screen keyboard to insert text and/or characters.
- ☉ Touch an application icon to launch it.



Touch and Hold

Touching and holding items will activate them. For example:

- ☉ Touch and hold an application/widget to move it.
- ☉ Touch and hold on a field and a menu with options will pop up.



Drag

Touch and hold an item, move your finger on the screen to the target position.

- ☉ Dragging a shortcut icon to the trash will delete it.



Flick, Slide, Swipe

Change screens by flicking, sliding, and swiping your finger on the screen. For example:

- ☉ Slide your finger to unlock the screen
- ☉ Flick and/or swipe your finger to scroll the screen or menu, to move from screen to screen, or to view next object in the gallery.



Pinch

Using two fingers (like your thumb and index finger), pinching inward will cause the screen to zoom out; pinching outward will cause the screen to zoom in. For example:

- ☉ Pinch outward to see zoomed in details of a photo in Gallery.
- ☉ Pinch inward to zoom out and see the whole page of a browser.

 


3.5 Home Screen

The Home screen is the starting point in using the Tablet.

Touch the Home key to display the Home screen. You can customize the Home screen with various wallpapers and create shortcuts for items you want to easily access.


3.5.1 Getting to Know the Home Screen

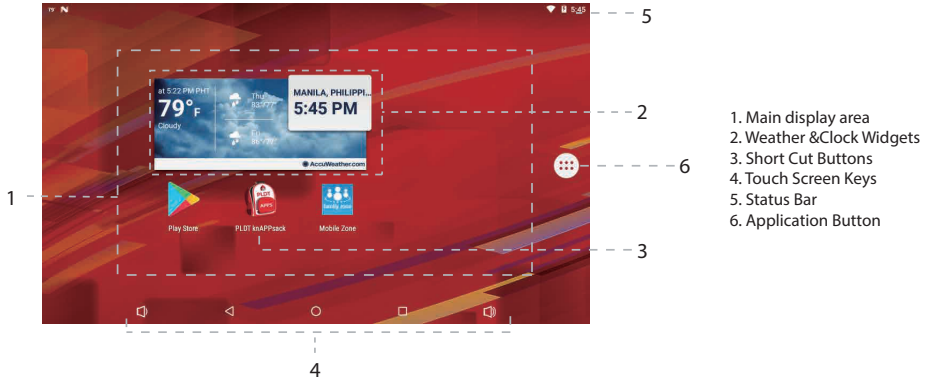

1	Main display area: This area displays application shortcuts, widgets, and other items that can be easily accessed by touching them.
2	Weather Widgets: The weather widget informs you of the time, date, and weather in your location. It can be customized based on your preference.
3	Short Cut Buttons: These are shortcuts for various applications. You may change and customize these according to your needs.
4	Touch Screen Keys: Back, Home, Navigation, Volume Down, Volume Up
5	Status bar: It shows the status of the device such as Wi-Fi connection status, battery status, and other information. You can touch to open a more detailed status menu.
6	Applications button: Touch to open the Applications screen, where you can view the applications installed on the Tablet. Touch any application icon to run it.





3.5.2 Extending Home Screen

Slide your finger horizontally across to the left or the right of your main Home screen to see your additional home screens. These screens provide more space for shortcuts or widgets. The small indicator shows the current position.

The  Home touchscreen button brings the screen back to your main Home screen.

3.5.3 Customizing the Home Screen

To change your wallpaper:

- 1 On the Home screen, press the Menu key and touch Wallpaper on the bottom menu.
- 2 Choose one of the following steps from the pop-up menu.
 -  Live wallpapers to select a wallpaper with animation.
 -  Pictures to select one of your pictures and set it as the wallpaper.
 -  Wallpaper gallery to select one of the pre-installed wallpapers.
 -  Gallery to select one of your pictures and set it as the wallpaper.

3.6 Locking and Unlocking the Screen

3.6.1 Locking the Screen

- When the Tablet is powered on, press the Power key and the screen will turn off and lock.
- When the Tablet is left idle for a specified time period that you have set, the screen will automatically turn off and lock.
- Always lock the screen to save the battery or prevent accidental taps when the Tablet is not in use.

3.6.2 Unlocking the Screen

- When the screen is off, press the Power key to turn it back on, and then unlock the screen
- If you have not set a screen lock, the screen will just turn back on when you press the power button.
- If you have set up a screen lock, you will be asked to input the relevant unlocking pattern, number, or password to unlock it.

3.6.3 Setting up a Screen Lock

- To set up a screen lock, touch the Applications key from the Home screen.
- Go to Settings > Personal > Security
- Touch Screen lock and choose from None, Slide, Pattern, PIN, or Password, and follow the instructions on the screen to set your screen lock.

3.6.4 Setting up a Screen Timeout Period

- To set the time between the last screen touch or key touch and automatic screen lock, go to your the Home screen. touch the Applications key, and touch Settings > Display > Sleep







You can enter and edit text in text fields and use menu commands to cut, copy, and paste text within or across applications.

3.7.1 Entering Text Using the On-screen Keyboard

To open the on-screen keyboard, touch a text field where you want to enter text.

To switch the input method, touch the  icon located at the lower right corner of the keyboard.

The following section takes the Android™ keyboard as an example.

- ⊙ When you are typing, the characters you are entering will appear in a line above the keyboard, along with some suggestions for the word you are typing. Press space or a punctuation mark to enter what you are typing, or touch the suggestion you want to enter. You can touch and hold the leftmost word to save it to the dictionary.
- ⊙ To capitalize the letter you are about to type, touch the upward arrowhead key  once. To capitalize all the letters, touch the upward arrowhead key  twice.
- ⊙ When you touch a key, a larger key will show up briefly over the keyboard. Keys with alternate characters display an ellipsis (...) below the character.
- ⊙ Touch and hold a vowel or the C, N, or S key to open a small window where you can touch an accented vowel or other alternate letters.
- ⊙ Touch and hold the Period key (.) to open a small window with a set of common symbol keys.
- ⊙ Touch the DEL  key to delete a character to the left of the cursor. Touch and hold the  key to delete all characters to the left of the cursor.
- ⊙ Touch the Symbols key  to switch to the numbers and symbols keyboard, and touch the alphabet key (ABC) to switch back.
- ⊙ Touch and hold almost any of the number and symbol keys to open an array of additional symbols.
To edit the text you have entered, touch to move the cursor to the location where you want to add or delete text. The cursor is a vertical bar that designates where the text you type or paste is inserted.
To close the keyboard when you are done typing, touch Go/Done button on the keyboard. Or touch the  icon on the lower left corner of the touchscreen.

3.7.2 Cutting or Copying Text

To quickly cut or copy all the text in a text field:

1. Touch and open the text field that contains the text that you want to cut or copy.
2. Touch and hold the text field to display the Edit text menu.
3. Touch Select all, Cut all, or Copy all.
4. Touch Cut or Copy to cut or copy the text.

To cut or copy selected text in a text field:

1. Touch and hold the text that you want to cut or copy. Once the text is highlighted, tabs will appear at the ends of the text, as well as the editing command menu.
2. Drag the respective tabs left and/or right to select the full text you want to cut or copy. The text between the tabs will appear highlighted.
3. Touch Cut or Copy to cut or copy the selected text.

The cut or copied text will be stored in a temporary area so you can paste it into another text field.


In order to paste the text, you must have cut or copied the text at least once. Once you have cut or copied the text, you can paste it multiple times.

To paste the most recent text that you have cut or copied into another text field:

 
1. Touch the text field where you want to paste the text.
2. Touch the location where you want to paste the text. A tab will show up.
3. Touch the tab and the Paste option will show up.
4. Touch Paste.

3.8 Opening and Switching Applications

To open an application, touch the shortcut on the Home screen, or go to the Applications screen by touching the Application button on the Home screen .

To open and switch to a recently used application, touch the  key at the lower right corner of the touchscreen.

The list will open on the right hand side. Touch the thumbnail of the application you want to access.

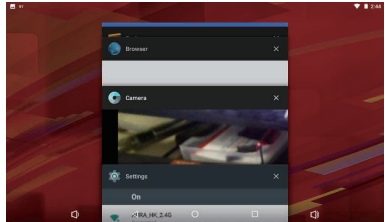

3.9 Accessing the Tablet's Settings

To access the Settings to view or change your wireless and cellular networks, sound and display, location and security, applications, language and keyboard, date and time, and other settings:

3.9.1 From the Home screen, touch the Status Bar, touch menu key on the top right corner of screen.

3.9.2 From the Home screen, touch the Application button and touch Settings shortcut.


3.9.3 If you recently have accessed the Settings, you can touch the Navigation key on the lower right corner of the touchscreen to display the list, and touch Settings in the thumbnails list that opens.

3.10 Languages & Input Method & Account Setting

3.10.1 Languages setting

1. Open setting list.
2. Click languages & input.
3. Select language from the following scrolling list.

3.10.2 Input method setting


1. Open setting list.
2. Click languages & input.
3. Click keyboard & input.
4. The default input method is English(United States)-android keyboard(AOSP).It will be added into the input method list automatically when you have installed other input method.
5. You can open right side  to select or cancel the relative input methods.

3.10.3 Setting to add accounts

1. Open setting list.
2. Click Add Account.
3. Google,company,email will show in the popping up interface.
4. Click GOOGLE to register or log in Google account.
5. Click COMPANY & EMAIL to register or log in email accounts.

3.11 Setting the Date and Time

3.11.1 To Automatically Set Date and Time:

 
1. Open the Settings list.
2. Touch Date & time.
3. Check the box for Automatic date & time.
4. Touch Select time zone, then scroll down and select the correct time zone from the list.
5. Choose whether or not to set the time to display in 24-hour format, check or uncheck the box to enable or disable this option.
6. To choose your preferred date format, choose from the options provided.
 -  When the time provided by the network is automatically used, you cannot set the date, time, and time zone by yourself.

3.11.2 To Manually Set Date and Time:

1. Open the Settings list.
2. Touch Date & time.
3. Touch Set date, then scroll down the roll to adjust the date, month, and year. Touch Done when finished.
4. Touch Select time zone, scroll down and select the correct time zone from the list.
5. Touch Set time, then scroll down to adjust the hour and minute. Touch done when finished.
6. To choose whether or not to set the time to display in 24-hour format, check to enable or uncheck to disable.
7. To choose your preferred date format, choose from the options provided.

3.12 Installing or Removing the Micro SD Card


Insert your micro SD card into the micro SD card slot until it clicks into position as shown in the following figure.

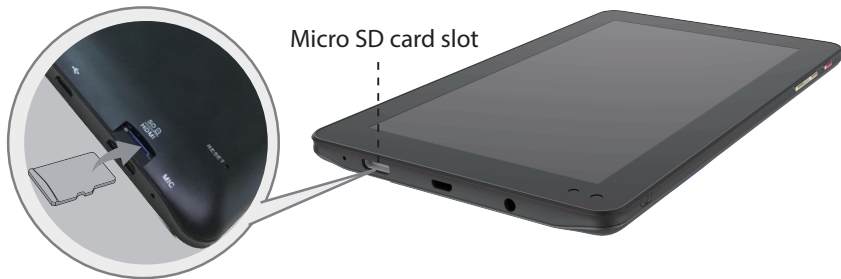

- Remove the micro SD card by gently pushing the card further into the slot, and then release it. The card will eject from the slot, and can be removed.

3.13 Connecting to or Disconnecting from Computer Using USB

 3.13.1 Connecting the Tablet to a computer using USB cable:

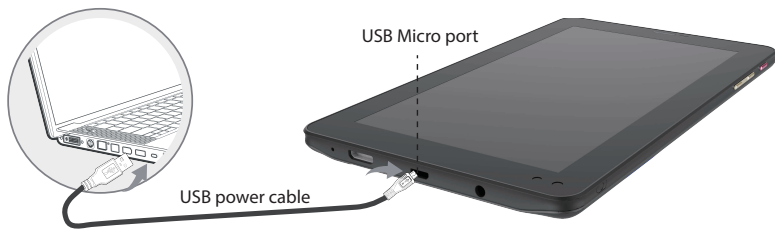


1. Use the appropriate USB cable (micro USB connector) to connect the Tablet to a USB port on your computer. Once it is properly connected, the Tablet displays a notification indicating that the USB is connected.
2. Touch the top right corner to open the Status Bar and touch USB connected in the Notifications list.
3. Touch Turn on USB storage to confirm transferring of music, pictures, and other files between the Tablet storage or micro SD card storage and the computer.

3.13.2 To disconnect the Tablet from the computer safely and to avoid any loss of information, follow the computer operating system's instructions to disconnect USB devices, and additionally follow the steps below:

1. Open the Status Bar by touching the top right corner.
2. Touch Turn off USB storage in the Notifications list.
3. Touch Turn off USB storage in the dialogue that opens.

 3.14 Connecting the Tablet to a TV

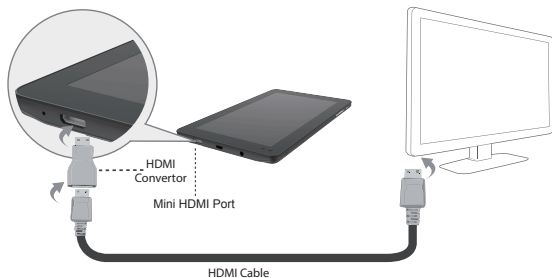

You can use the Tablet to play audio and video files on a high-definition TV, using a High-Definition Multimedia Interface (HDMI) cable. The HDMI cable is an optional accessory that's not included with your TELPAD.

When purchasing an HDMI cable, please check the connector type of the cable.

You may purchase and use any Standard HDMI Cable Version 1.0 ~ 1.4, but HDMI cable version 1.4 is the most apt cable to use for 3D functions.

If there are problems with 3D using other version cables, please purchase a suitable cable.

The Tablet supports various resolution output formats, so you can select the appropriate resolution option when connecting the Tablet to the TV.

Note: Some TVs may not support HDMI resolution. Please refer to your TV manufacturer's information for details on HDMI support.

Connecting the Tablet to the TV:

1. Connect the HDMI cable and HDMI converter together.
2. Plug the HDMI converter to the Tablet's HDMI port and connect the cable to the TV.
3. Select the appropriate program source on the TV for the HDMI interface.

3.15 Wireless Networks

The tablet is able to connect to various wireless networks and devices. Including Wi-Fi data networks, and Bluetooth devices such as headsets for voice and data transmission.

Wi-Fi

Wi-Fi is a wireless networking technology. Wi-Fi technology can provide wireless Internet connection over distances of up to 100 meters, however the connectivity of the Wi-Fi depends on the Wi-Fi router, and the surrounding environment in which it operates.

By accessing a wireless access point or "hotspot" the tablet can be connected to the internet. Some access points are open and can be easily connected to, but others are hidden or have security protection such as authentication or encryption, which will require configuration to gain access.

3.15.1 Opening Wi-Fi Settings

Wi-Fi settings allows you to turn Wi-Fi on or off, turn the open network notification on or off, connect to a Wi-Fi network and add Wi-Fi networks.

- Open the Settings list. (Through the shortcut on the Home Screen, Applications screen, or Status Bar.)
- Touch Wireless & networks, and then touch Advanced.

3.15.2 Turning Wi-Fi ON or OFF

There are two ways to turn the Wi-Fi On or Off.

- Open Settings, locate the Wi-Fi tab
- Touch the On/Off button to turn on or off the Wi-Fi.
- Open the Status Bar
- Touch the Status window to lengthen the Status bar.
- Touch Wi-Fi to access Wi-Fi settings
- When not using the Wi-Fi, please turn it off in order to extend the battery life.

3.15.3 Connecting to a Wi-Fi Network

When the Wi-Fi is turned on, the device searches for available networks accessible within range.

Inside Settings, when the Wi-Fi is turned on, the available networks will be listed on the side.

- Select the network you would like to connect to.
- If the network is open, it will automatically connect as soon as you select it.
- If the network is secured, there will be a lock icon beside the name. Enter the correct password to connect.

To view detailed information about the network the tablet is connected to, touch the name of the network and the information will show up such as IP address, speed, etc.

3.15.4 Turning Open Network Notification ON or OFF

When Wi-Fi is already on, touch Network notification to check or uncheck the box to turn the open network notification on or off in the Wi-Fi settings list. The tablet will display or stop displaying notifications in the status bar when the device detects open networks in range.

3.15.5 Adding a Wi-Fi Network

- To add a Wi-Fi network, firstly follow the above steps to turn the Wi-Fi on, and then follow the steps listed below:
- Under the Wi-Fi settings list, scroll down and touch Add Wi-Fi network.
Network SSID: Enter the name (SSID) of the network in the text field.
Security: Select the security scheme in the menu that opens
- Password: Enter any required security credentials.
Touch Save to finish adding the Wi-Fi network.

3.15.6 Forgetting a Wi-Fi Network

- Tap Settings > Wi-Fi
- Touch the network name you want to remove from the Wi-Fi networks list
- Touch Forget in the menu that opens.

3.16 Bluetooth

Bluetooth is a wireless communications technology for exchanging information over short distances. The connectivity between the Bluetooth devices may be affected by their surroundings and is altered or reduced by obstacles such as walls or other electronic devices.

3.16.1 Opening Bluetooth Settings

To configure the Bluetooth settings of the tablet in the Bluetooth settings list:

- Touch and open the Settings from the Home screen or Applications screen
- Touch Wireless & networks, and touch Bluetooth settings.

3.16.2 Turning Bluetooth ON or OFF

- Open the Settings
- Under Wireless & Network > Bluetooth
- Touch the On/Off button to activate or deactivate Bluetooth
- To extend the battery life of the tablet, turn Bluetooth off when not in use.

3.16.3 Changing the Bluetooth Name of Your Tablet

The Bluetooth name of your tablet is the identification of your device to other Bluetooth Devices.

- Open the Settings.
- Under Wireless & Network touch Bluetooth.
- Touch the Menu button at top right corner of screen.
- Touch Rename tablet in the options given.
- Type the new name in the window prompted.
- Touch Rename to confirm change.

3.16.4 Connecting to Bluetooth Devices

Pairing with a Bluetooth device

Search for a Bluetooth device, pair with it, and exchange information between devices.

- Open the Settings
- Under Wireless & Network touch Bluetooth.
- Touch the name of your device to make it visible to nearby devices.
- Touch Search for devices at top to begin or reinitiate search for other devices.
- Touch the name of device that you want your device to pair up with.
- Window will show up asking for confirmation, touch Pair to confirm.

Paired devices

Once a device is paired, the name of the newly paired device will show up under a separate category as Paired devices. After a device has been paired, it stays paired unless the pairing is disconnected manually.

3.16.5 Disconnecting from or Unpairing a Bluetooth Device

To automatically disconnect your tablet from a paired device, simply turn off the tablet's Bluetooth or the target device.

To manually disconnect your tablet from a paired device or to be unpaired from this device by erasing all the pairing information;

 
- Touch Unpair.

3.17 Google Services

3.17.1 Creating a Google Account

When accessing a Google service for the first time with your device, you will be asked to sign in using your Google account.

Make sure the Tablet is connected to a network to sign in or create a Google account.

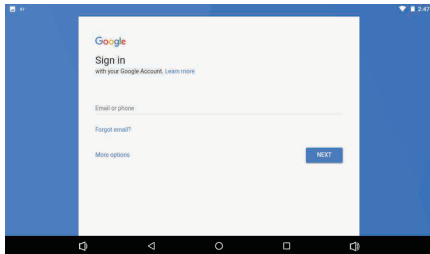

If you already have a Google account, simply enter your information and sign in.

If you do not have an account, to create a Google account:

1. When asked if you have a Google account or not, touch New.
2. Insert your last and first name, touch Next.
3. Type in the e-mail address you would like to use, and touch Next.
4. Insert the password, making sure that you correctly type in the password twice when prompted.
5. Type in your Recovery e-mail address and set up a security question to help you access your account in case you forget your password.
6. Check the box that to agree to the Google Terms of Service and additional privacy policies, and touch "I accept".

7. Input the authentication keys that appear. Your new Google account has been successfully created!

3.17.2 Using Play Store

You can access thousands of easily downloadable applications and games for your Tablet via the Google Play Store.

3.17.2.1 Searching for Applications

 
There are several ways to search for applications in the Play Store, through:

1. Featured applications.
2. Categories
3. Search function.
4. Your downloads.

⦿ Within the each option, you can easily search for applications by name or keyword.

3.17.2.2 Installing an Application

1. Go to Play Store from the Home screen or Applications screen.
2. Touch a category, and then touch the application you want to download.
3. To install, touch FREE (for free apps) or Buy (for paid apps) to begin download and installation.
4. Download progress can be checked from the notification panel. Most applications will be downloaded within seconds.
5. After the application has been downloaded and installed on your Tablet, the content download icon appears in the Status bar.
6. To download and install an application from sources other than the Play Store, touch Settings > Security, and check the box for Unknown sources.

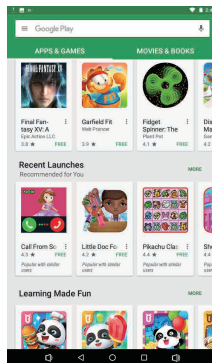

3.17.2.3 Uninstalling an Application

 
1. Go to Play Store, touch the My apps button.
2. Touch the application to uninstall, and then touch Uninstall.
3. When asked for confirmation, touch OK to remove the application from your Tablet.



3.17.3 Backing up and Restoring Apps and Settings from a Google Account

1. Access the Settings list from the Home screen or Application screen.
2. Scroll down the Personal section, and touch Backup & reset.
3. Check the box for Back up my data and Automatic restore.

3.18 Gmail

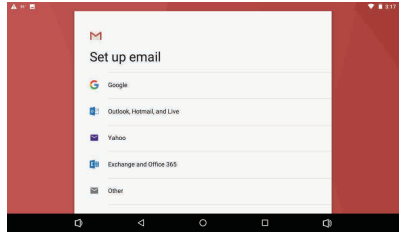
- Gmail can manage all the e-mails. Users can set the email address according to account type, and then log in.

 



- 1. Access Gmail application.
 2. Select an e-mail address.
 3. Set up e-mail according to user needs.
 4. One can add Google existing account or creating a new account.
 - 4.1 Input the existing account and password, accept the terms of service, and log in.
 - 4.2 Click to create a new account. One can follow the on-screen instructions to finished the register.
 5. Add & delete Google account
 - 5.1 Login your mailbox, click account name to "add account" or "manage accounts". Tap "manage account" and choose the account you want to remove. Click the icon  on the top right corner, tap "remove account" to delete this account.
 - 5.2 Click "Settings" and tap "Accounts" to "add account" or remove email account. Select the email account you want to remove, click the icon  on the top right corner, tap "remove account" to delete it.

 
 
3.19 Camera Instructions


Take picture or make video: find and tap “camera” icon on tablet, keep lens cap clean and rub it by a clean cloth before shooting, any stain on it will cause photo bad exposure or blurring.

 
- 1、 Launch “Camera” at application program interface, click  to take picture.

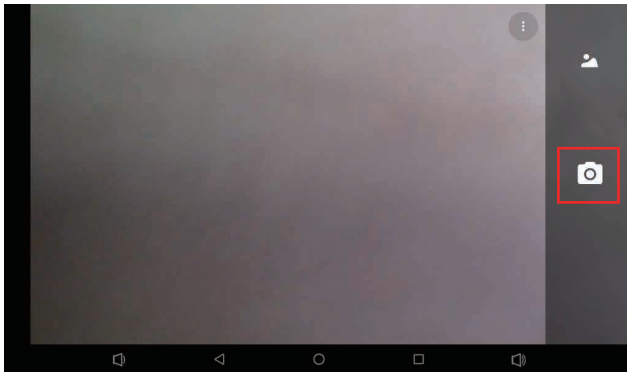


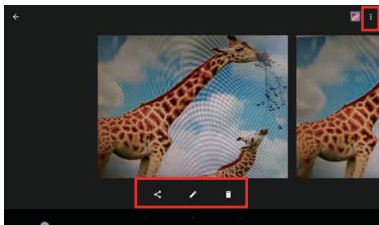 
2、 Tap  at the top right corner of visible range, four icons from top to bottom is “switch back and front camera”, “flashlight adjustment”, “gridding”, “delay of capturing and 3DHR”.

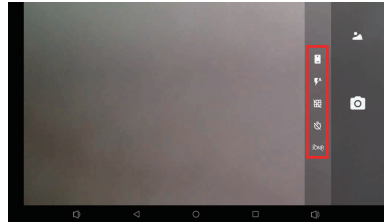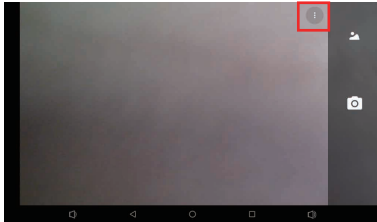


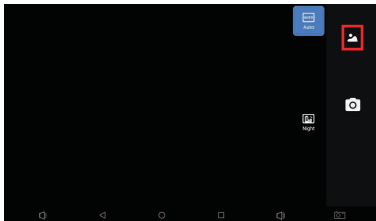 
3、 Swipe right in visible area, one can select video mode or tap  to enter camera setting. Tap screen during video recording can instantly capture photo.

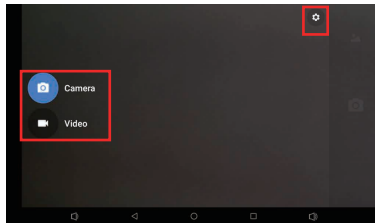

4. Swipe left in visible area, one can view, share, edit or delete the photo and video. And tap  at top right corner to check the details.



 
5. Tap icon  at the top right corner can adjust "Auto" or "Night".



Terms of Use

The Home Control app is a Home Automation System which is comprised of the following: IR remote controller, Reservation (Timer)control, Camera motion detection and Outside-Home Control features which are integrated and provided for user's convenience. User has to consider the hardware configurations like IR sensor direction, distance from TELPAD to target device, Camera direction and power supply for the TELPAD. The power stability of TELPAD should be considered if TELPAD is used continuously for a long time and also the user can set TELPAD in "stay awake mode" to keep the Home control running. User has to verify the software configuration like IR signals, Internet connection, and personal use case. The Out-Home control function may not work properly depending on the following factors: client mobile device, unstable network environment, network timing or Internet Service provider. The Outside-Home Control works only on Android devices which are equipped with Google service. The push message used for Outside-Home Control is provided by Google™ , GCM (Google Cloud Messaging) message do not guarantee high percentage of delivery. User needs to retry if the message/request is not delivered successfully. For the service implementation, only the latest image captured and remote controller status will be stored in the server with security code algorithm. User has to carefully manage the connection between "Home Control Host" and "Home Control Client" should be installed on the user's smartphones/android devices to monitor/control TELPAD (to register client's device connect to TELPAD via bluetooth).

TELPAD Home control will work with the devices that are already in your home. It can control your TV, Cable Box, Radio, DVD, DVR, VCR, Blu-Ray, CD, Audio, Air Con (A/C), Amplifier and Satellite and much more.

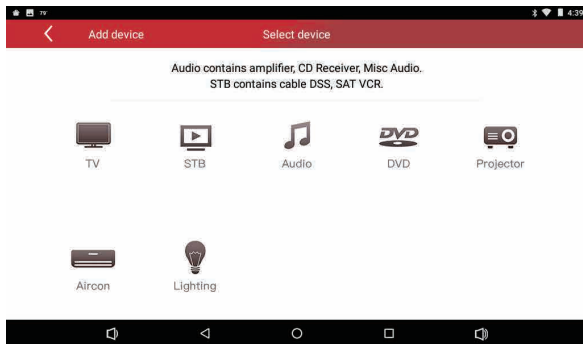


NOTE:

The Home Control operates the same way as an ordinary remote control IR signals. Please be careful not to cover the IR sensor marked with Red of the TELPAD when you use the IR Remote function. This function may not be supported depending on the model, the manufacturer or service company.

3.20.1 Installation of "Home Control" APK.

Find and tap the "Home Control Link" icon in MA7R Apps, an option box pops up, select "OK". After user logs in his (her) Google account, MA7R screen will jump to "Google Play Store". If the user's "Google Play Store App" is not the latest version, the "Google Play Store App" will exit and update automatically. Click "Home Control Link" again, "Google Play" will enter the latest version and user can download and install "Home Control App".

 Remark: This usage may be changed without notification upon application update.

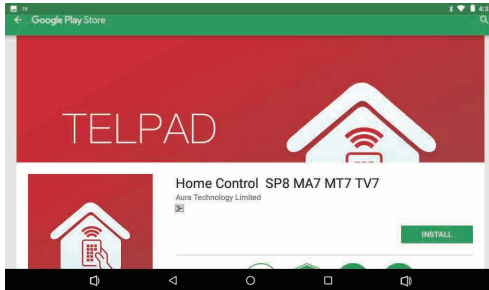

3.20.2 IR Universal Remote Initial Configuration



 
-From the Home screen, tap



- From the main menu tap "add Remote control" → Select Device → Select Brand * → Select Model → Confirm if signal is working ** → Save remote with "Remote Name" → Select Zone and tap save → Tap selected Zone → tap saved "Remote Name" → you can find installed IR remote UI.

* If you device is made by top ranked brands, then check "Show most common modelsonly" option. This will filter out minor provider. There are two search methods available , standard and model search flow. Please use default standard search flow if you are first time to setup. If you want model search, check "Model Search" option, you can search the code with input model name.


- Standard search flow : Optimized and intelligent algorithm to find the right code. User just tap the displayed button and select "Correct" if it is works. If this process fails, it will automatically forward to model search flow.

- Model search flow : User need to input at least 2 characters for model name of the device, and tap . User gets the count of available codes (Interrelated device) for this brand. By using   and preview command button, it will be able to traverse all codes for user to identify the right code. If the model name is incorrect or left blank, it will show all available code for the brand.

** When confirm signals, please point the Red part of TELPAD towards the device you are trying to control just like a standard remote control.

3.20.3 IR Learning

 - If you want customized remote, please select "Customize" when selecting Brand.
- Once installed, it will show learning function interface. Each button needs to be assigned a signal with IR Learning process by touching it until tapping "Finish" button.

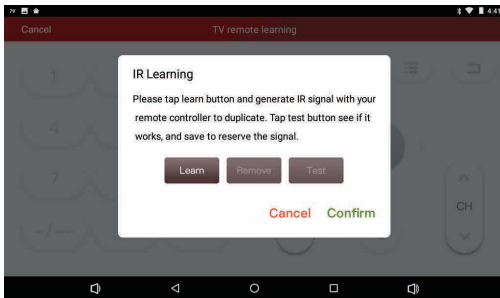

-Please point your original remote controller with the Red part of TELPAD like right picture And follow on-screen instructions to configure the device.

-Please check if your device is working just like original remote controller with "Test" button. If not, please tap "Learn" button and repeat several times until it works. Tap "Confirm" to save the changes.

3.20.4 Reservation

- You can make scheduled Power On, Off and toggle on your device with IR control. This allows you to generate a IR signal at a specific time. If you need Other signal for reservation, please use IR leaning function to make your signal first.

Reservation List									
Monday									
Tuesday									
Wednesday									
Thursday									
Friday									
Saturday									
Sunday									
	15	16	17	18	19	20	21	22	

 
3.20.5 Reservation Setup

- Reservation is just like Alarm app. The difference is we have assign a IR signal rather than a melody. Please install required IR signal with "IR Universal remote Initial Configuration" process before reservation setup.

- From the menu tap "Reservation Setup" → Select Time → Select Zone → Select Device → Select Signal* → Select Day → Save reservation.


* "Power On" signal makes the device always on. "Power Toggle" signal is used to toggle power signal On and Off.


- Please make sure "Mobile Client Setup" process is done if you want receive notification on mobile.

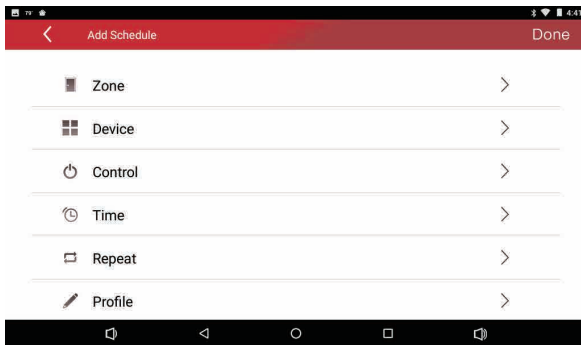

3.20.6 Out Home Control

  TELPAD provides Out Home mobile remote control feature. All you have to do is pairing your mobile and TELPAD. You can control your home device like air-conditioner or IR controllable light system with your android mobile from Anywhere with your 3G or WIFI connection. If you want to check the result. Of course, TELPAD can be provided with remote camera for home monitoring

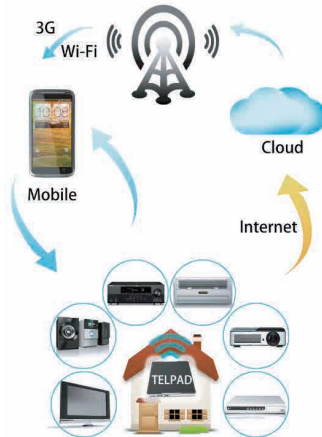

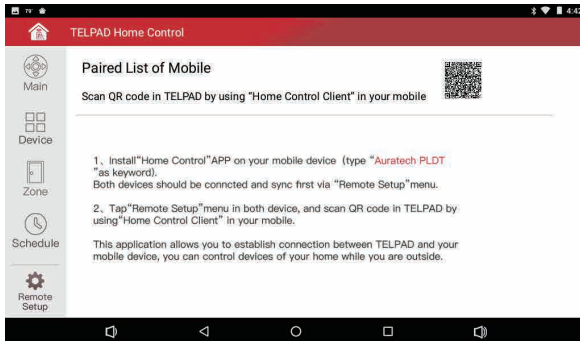



Mobile Client Setup


- "Mobile Client Setup" is a pairing process. It allows you to establish connection between TELPAD and mobile device. TELPAD and "Home Control Client" in mobile device can be connected with QR code scan. Please follow on-screen instructions to connect the device.

- Download & install "Home Control Client" in the mobile if not installed. You can download the "Home Control Client" application in Google PLAY Store with Keyword PLDT and Auratech.

 - From the main menu tap "Remote Setup" → tap "Connect with Mobile"

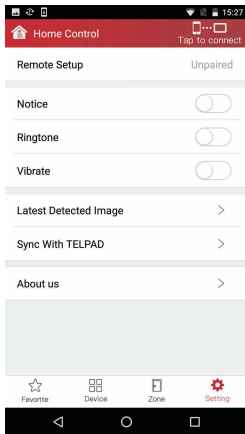

- Execute "Home Control Client" → tap  → "Remote Setup" (in the Mobile, not TELPAD)
- Refresh the list by clicking the "Search Client" button in TELPAD → Select the Mobile device in the list.
- Please provide TELPAD with continuous power supply for Out-HomeControl.

 
- Please make sure "Mobile client Setup" process is done if you want out home control.
- From the main menu in you "Home Control Client" tap  → tap "Sync With TELPAD". Once downloaded, "Home Control Client" can control TELPAD with IR Remote menu (Select Zone → tap "Remote Name" → tap required signal).
- From the main menu in your "Home Control Client" tap "Capture" for request TELPAD Camera still image.
- Please follow on-screen instructions and wait for seconds until a still image pop-up.
- See the image and Tap <Back> key to return to main menu.
- Only the latest captured image (Automatically replace with new one) will be stored in the server with security code algorithm.
- Please provide TELPAD with continuous power supply for operation.

 
NOTE:

The Out-home control function may not be worked properly depending on the client mobile device, unstable network environment, network riming or Internet service company. The Out-home control function works only on Android device which is equipped with Google service. The push message used for Out-home control is provided by google™, GCM message not guarantee high percentage of delivery. User needs to retry if the message is not delivered due to various reason. User has to carefully manage the connection between "Home Control Client" and TELPAD, as "Home Control Client can monitor TELPAD.


3.20.7 Motion Detection

- "Motion detection" feature will take and send photo of what it is in front of TELPAD. You can use it for intruder detection. TELPAD built-in camera is used as a motion detection triggers. It will provide notifications to your mobile with capture images.

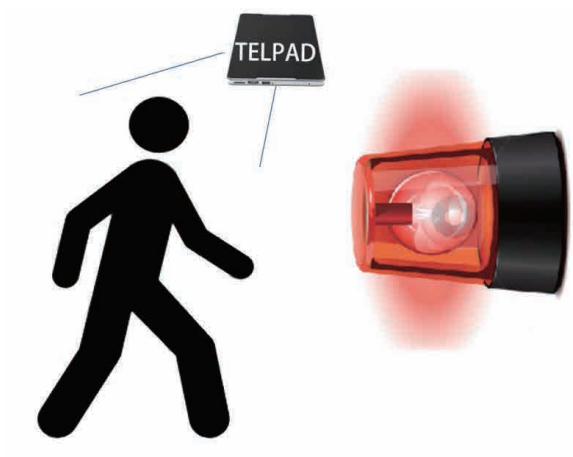

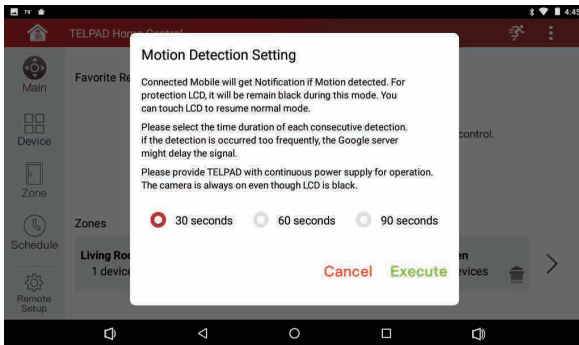

Motion detection

- Please make sure "Mobile Client Setup" process is done if you want receive notification on mobile.
- From the main menu in TELPAD, please tap , "Motion Detection" and follow on-screen instructions. The notification will be forwarded to the connected mobile once started. If TELPAD camera faces continuous change, it will not send all of the pictures (Send 1 notification per about 30 seconds).
- Please provide TELPAD with continuous power supply for operation. The camera is always on even though LCD is black.

3.21 Home Care

Terms of Use

 
The Home Care APP utilize various health related data you enter. Your data are stored and accessed by TELPAD Home Care only and are not transferred to or stored on any servers. The calculated forecasts of Home Care may not be accurate and should not be used to prevent unwanted pregnancy. The forecast accuracy depends on a number of factors including how regular one's cycle length is, how many periods have been measured with the app. Anxiety, stress, age and other factors can also affect one's cycle from month to month. The measured temperature accuracy depends on the operating method of iFever Manager.

This App and devices is not for clinical or medical use.

Installation of "Home Care" App

Find and tap the "Home Care Link" icon in MA7R Apps, an option box pops up, select "OK". After user logs in his (her) Google account, MA7R screen will jump to "Google Play Store". If the user's "Google Play Store App" is not the latest version, the "Google Play Store App" will exit and update automatically. Click "Home Care Link" again, "Google Play" will enter the latest version and user can download and install "Home Care App".

Remark: This usage may be changed without notification upon application update.

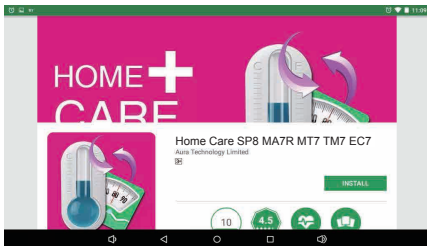




This section contains a description of Home Care application which is working with “iFever manager” dongle. iFever Manager enables your TELPAD for body temperature measurement. You can keep history of your family temperature for a long time.

 
If your baby gets a fever, you can show doctor with the daily graph screenshot. (Show body temperature variation based on time axis)

If you are female, TELPAD monthly view can help you to keep track of your fertility/menstrual cycles. Just measure temperature each morning per day, and then TELPAD does the rest.



With Monthly view, you can monitor your average body temperature and keep your body healthy. Average body temperature of a healthy adult is 36.50-36.80°C. But, average daytime body temperature of a healthy adult is above 37°C. Cancer patients have low body temperature, usually less than 36°C.

1. From the Home screen, tap  → 
2. If you are using this application for the first time, please tap the register button to add your ID and password. If the screen is not for temperature measurement, please tap  at the top right corner of the screen.

3. Insert your home care hardware - iFever Manager dongle in Audio jack.

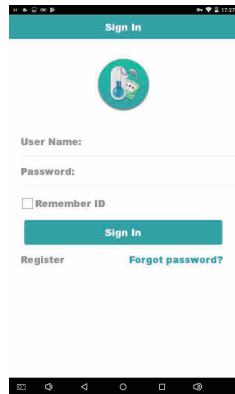


  4. Tap the Start button or volume up hard key to begin temperature measurement.
5. Please move your iFever Manager sensor part close to your (or others) forehead position during three seconds. Measured distance is within 1 cm.
6. Please see the measured value, and tap the save button to store the data. Tap Clear button to clear last measured value if needed.
7. Supported body Temperature range is from 34.3° C to 43.1° C. It will not save the data if out of range occurs.

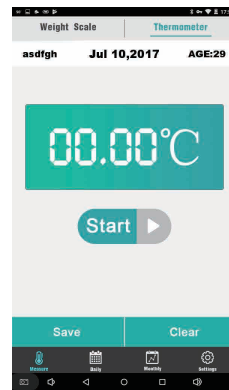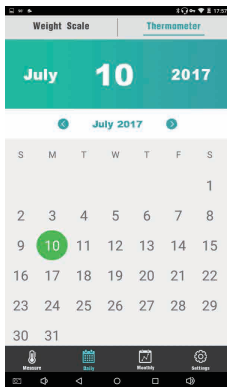


8. You can see the measured data, and time in Daily tab by pressing the date. Monthly tab can show you a graph with your accumulated data. (See Appendix 1, 2, 3 and 4 for more description)

 Appendix 1.Daily Graph

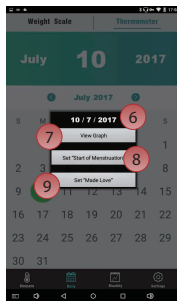


No	Item	Description
1	Last month button	Move to previous month
2	Calendar title	Display current date
3	Next month button	Move to next month
4	No measured data	If no measured data, will be displayed with pale sky blue
5	Today	Today is Green background
6	Selected date	This date can be selected when user touched *
7	View Graph	Display temperature data with graph
8	Start of menstruation	Mark as menstruation start date.On/ Off Start menstruation date
9	Made love	On/ Off record for the event (For information only)

 * If Basal body temperature option is not ON in the Setting menu, No 7, 8, 9 menus will not be displayed, and if user selects a date it will show Graph View.

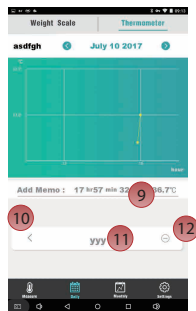


No	Item	Description
1	Last month button	Move to previous Month
2	Calendar title	Display current date
3	Next month button	Move to next Month
4	Measured range	Measured temperature data range
5	Temperature graph	Show the measured data with line
6	Temperature delete button	Delete selected temperature data
7	Temperature time	Show measured time and data
8	Add memo	Move to Add memo window
9	Temperature value	Show temperature and time for adding memo
10	Back button	Back to previous screen
11	Memo content	Show Memo
12	Delete memo	Delete Memo

 Appendix 2. Monthly Graph

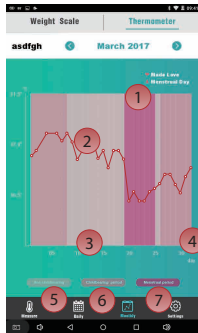

No	Item	Description
1	Start menstruation	First day of menstruation (Marked in Daily graph)
2	Graph	Show graph with temperature
3	Made love	Made love date (Marked in Daily graph)
4	Y axis	Date for the month
5	Non-Childbearing	Indicate non Childbearing period
6	Childbearing period	Indicate Childbearing period
7	Menstrual period	Indicate Menstrual period

 
Appendix 3. Setting

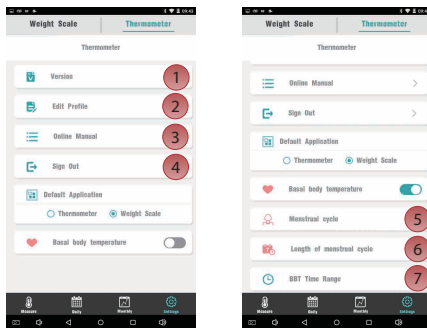


No	Item	Description
1	Version	Show software version number & release date
2	Edit Profile	Edit account information
3	Online Manual	Check online user manual
4	Sign out	Logout for another user login
5	Menstrual cycle	Menstrual cycle can be set up to 20-40 days
6	Length of menstrual cycle	Menstrual period can be set up to 1-7 days
7	BBT Time Range	Setting time range for BBT temperature measurements (00:00 ~ 23:59)

Appendix 4. Basal body temperature

 Basal body temperature (BBT) is our lowest temperature during rest, which is usually during the time we're sleeping. This is the reason why BBT should be taken before getting out of bed for accurate fertility charting. Ovulation causes one half to one-degree rise in BBT, so monitoring BBT helps provide information on the best time for conception.

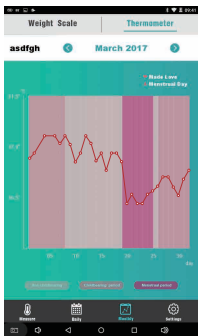

Normal temperature

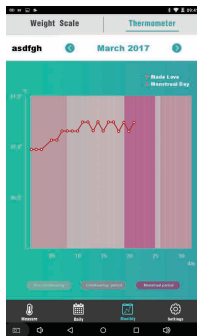 

pregnancy temperature

Note:

The calculated forecasts of Home Care may not be accurate and should not be used to prevent unwanted pregnancy. The forecast accuracy depends on a number of factors including how regular one's cycle length is, how many periods have been measured with the app. Anxiety, stress, age and other factors can also affect one's cycle from month to month.

 
Remark:

If user forget his(her) password, click "forget password" on login interface to retrieve the password via the E-mail written down when registered account.


3.22 Famchat

Famchat Manual


1. Connect the Tablet to Wi-Fi, then go to Google Play Store, search PLDT Famchat Server and tap "Install". As shown below:

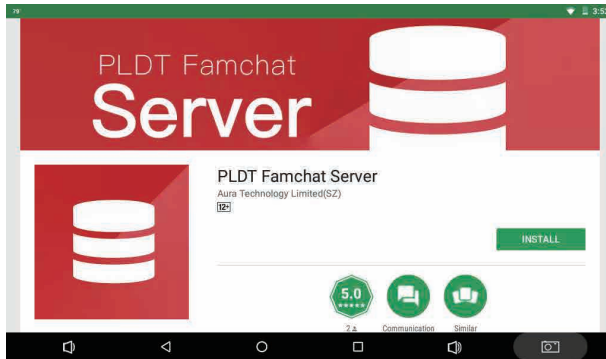



 
2. After PLDT Famchat Server is installed, allow Server to access the device and enter the Server's main interface, Server will run automatically. As shown below:

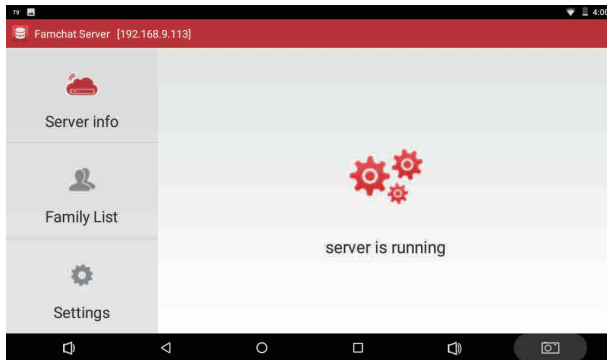

 
3. After the server starts running, user can go to Settings to view Server's IP address and QR code. As shown below:

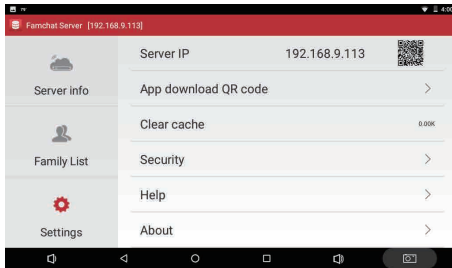

   
4. PLDT Famchat installation on mobile device: connect smart phone to the same Wi-Fi network with the Tablet, then go to Google Play Store, search PLDT Famchat and tap "Install". As shown on the right:

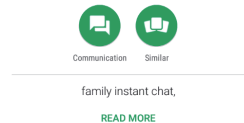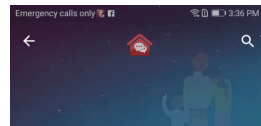

 
5. After the App is installed successfully, tap to open PLDT Famchat; allow the App to access to smart phone, enter the Log-In page to scan the Server's QR code or manually enter Server's IP address to pair with the server. As shown on the right:

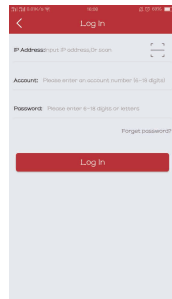

 6. New user needs to click "Register Now" to get a user account. After registration is finished, use the account and password to log in. As shown on the right:

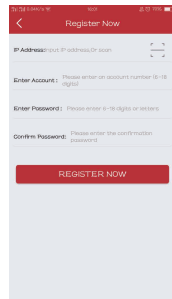



7. Click  in the upper right corner of page Message to create chat group (User can create several chat groups.) As shown on the right:

7.1 A red dot next to a family member or a chat group indicates message(s) unread. User can click into the chat page to view unread message(s).

7.2 User can send texts, voice messages and emoticons when chatting. Tap a voice message and it will play automatically.

7.3 User can search information in the search field on the top of page Message. Tapping “+” on Group Information page of a chat group can add members to this group.

  
8. User can go to Fam to view all family members that are registered to the same FamChat Server. As shown on the right:

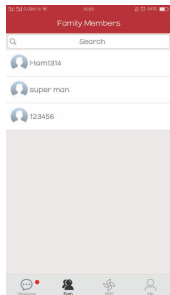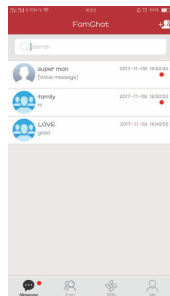

9. User can post news and pictures on BBS. As shown on the right:



 10. User can go to Me to edit profile, turn on / off Do Not Disturb mode, clear cache, view FamChat version information or log out.

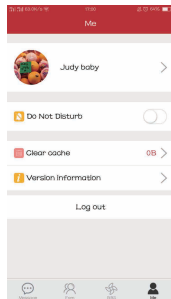

3.23 DLNA

3.23.1 DLNA Introduction

The full name of DLNA is DIGITAL LIVING NETWORK ALLIANCE. The purpose is to enjoy your music, photos and videos anywhere anytime. DLNA is initiated by SONY, Intel and Microsoft. It aims at resolving interconnection and interworking of wireless and wired network for personal PC, consumer electronics, mobile devices. It's possible for the unlimited sharing and growth of digital media and content services and has reached more than 280 member companies at present. DLNA doesn't create technology but forms a kind of solution which we can comply with the norm. Therefore, the various technologies and protocols chose are all wide range used currently.

3.23.2 DLNA Functions

1. Exploration: to search non-configured devices in network and to calculate its provided family solution performance.
2. Browse: to browse the contents and to classify them through different ways
3. Search: to search the specific contents on the device
4. Distribution: to send multimedia content by whole network
5. Services: to inform address book by network
6. Print: To send contents to network attached printers
7. Control: To change the device status by using the network
8. Upload: to send contents to the server
9. Download: to receive and store contents
10. Automatic decoding: to change the resolution or contents' format to ensure the equipments can translate correctly.
11. Service guarantee: to distinguish the priority of network traffic, it will prefer to give up the weakest one if the network overload.

3.23.3 Control Device Discovery and Connection

Our MA7R can support DLNA and you can operate as below:

Please use mobile phone as source port and ensure the version of the android must be 2.3 and above(because only version 2.3 of android can support miracast) such as Google device.

1. Wi-Fi connection

Please make sure two devices are in same Wi-Fi network, such as TP-LINK_TEST.

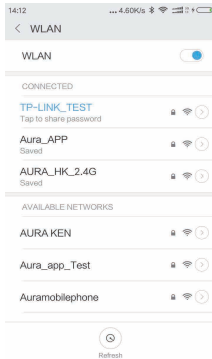 


Figure 1.1 Google device has been connected to WIFI



Figure 1.2 MA7R tablet has been connected to WIFI

2. Start Application

-Please start "eHomeMediaCenter" in MA7R tablet and click "Settings" to change your device name for easy identification .
Such as " MA7R".

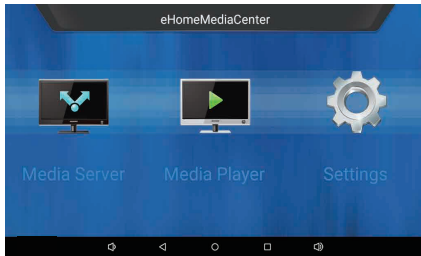 


Figure1.3 click settings

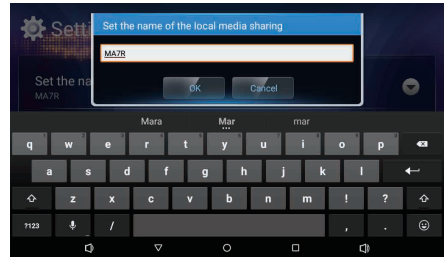 


Figure1.4 Change device name

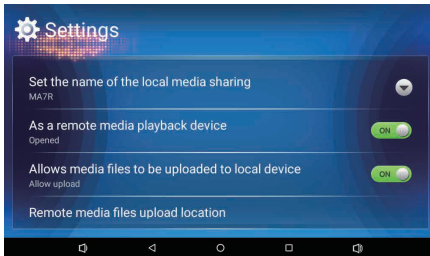 


Figure1.5 finish

- Please start "apk-iMediaShare" and the interface Figure1.6.

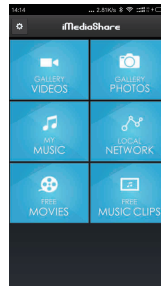 


Figure1.6 apk-iMediaShare interface

3.23.4 The Brief Introduction of Interactions between Tablet and Mobile Phone

☉ To push local video, music or photos on your mobile phone to display on tablet.

Please refer to picture 1.6 “GALLERY VIDEOS”、 “GALLERY PHOTOS” and “MY MUSIC”. For example, click “MY MUSIC” as the figure 1.7 below, you will see the local files on your mobile phone.

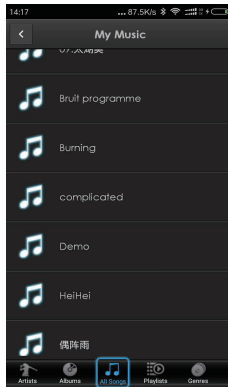 


Figure 1.7 Enter the interface of “MY MUSIC” showing local music files on your mobile phone.

Click one of the file, you will enter an interface shown as figure 1.8

1.8 interface

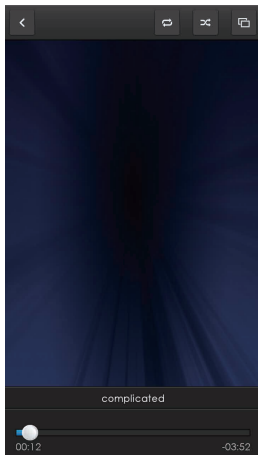 



Figure 1.8 Music Playing Interface and click , the following figure 1.9 will pop-up.

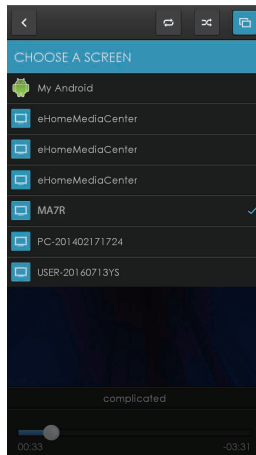 


Figure 1.9 Open "choose a screen"

Please choose " MA7R" in above figure ,the music on both mobile phone and tablet will play at the same time. But only MA7R tablet have music voice and your mobile phone can return and operate other function once above operation finished.

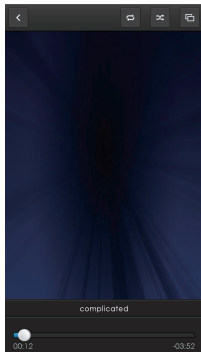 


Figure 1.10 Music Playing Interface on mobile phone

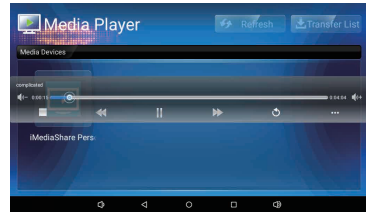 


Figure 1.11 Music Playing Interface on MA7R tablet

To push the live video or music on your mobile phone to display on tablet.

Please refer to Picture 1.12 "FREE MOVIES" and "FREE MUSIC CLIPS", "FREE MUSIC CLIPS" in below figure as an example.

Figure 1.12 "iMediaShare" interface → Click "FREEMUSICCLIPS" → Access "flippo" interface. If it's first time for you to operate and there is no flippo APP in your mobile phone, the "flippo" link will be given in the on-screen interface and you can follow the instructions to download and install.

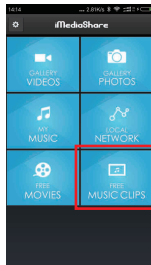 


Figure.1.12 apk-iMediaShare interface

Click "flips" to access the following figure interface(Figure.1.13 /Figure.1.14), Click"Log in"as the following figure(Figure.1.14)

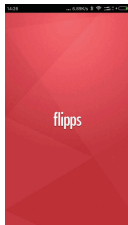 


Figure.1.13 flips APP interface

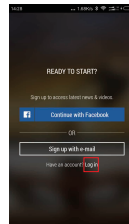 


Figure.1.14 To login flips interface

You no need to login facebook account, click “done” on top right corner in the above figure, then click back key to access the following figure interface. (Figure.1.15)

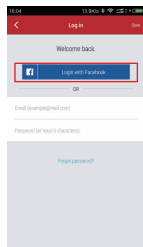 


Figure.1.15 account log in interface

Choose and open any project in above figure, click “STAFF PICKS” as an example and figure below.(Figure.1.16)


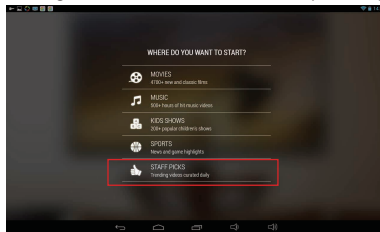 


Figure.1.16 start “STAFF PICKS”


Choose and play any video in the above interface, “Latest News” as an example.((Figure.1.17)

 Figure.1.17 flipp's APP main menu interface

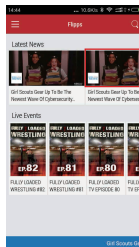

Click “choose a screen” at top right corner in above figure and choose “ MA7R”, the live video on mobile phone will be pushed to play on MA7R tablet. (Figure1.18)

Figure.1.18 Playing interface on mobile phone

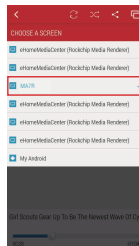 

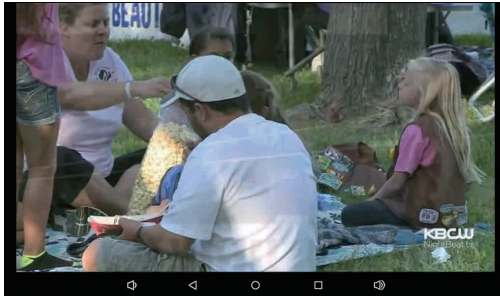 


Figure.1.19 Playing interface on MA7R tablet

Remark:

- 1 . The above are all for multimedia files in mobile phone sharing to tablet. Vice versa, multimedia files in tablet can also be shared to your mobile phone.
- 2 . In order to guarantee the smooth playback of device, please operate above in good environment of network.

⊙ Mobile phone can share the music and video on MA7R tablet.

Please start “apk-iMediaShare” on mobile phone, and touch “media player” in “eHomeMediaCenter” on MA7R tablet “Media Player”interface. (Figure1.20)

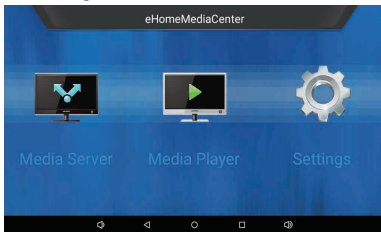 


Figure1.20 start Media Player



Figure1.21 start iMediaShare

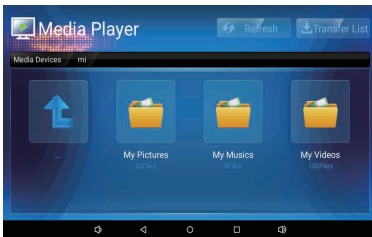 


Figure1.22

When you start “Media Player” and the interface will show shared music, video and photos. You can click the files which you want to play. (Figure1.21 and 1.22)

⊙ MA7R tablet can share local music, video or pictures to mobile phone.

Please start the “Media server” in “eHomeMediaCenter” interface on MA7R tablet when apk-iMediaShare is started on mobile phone.(Figure1.23)

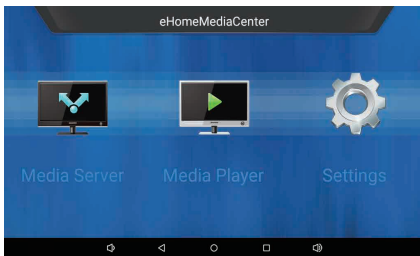 


Figure1.23 Start Media server

Tap" add share" on top right corner and touch "ok" to confirm the files which you want to share.(Figure 1.24 and Figure 1.25)

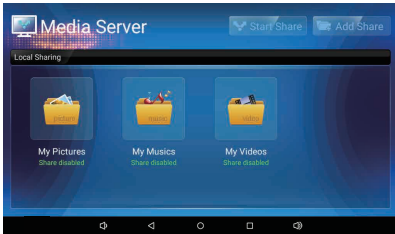 


Figure 1.24 click top corner "Add Share"

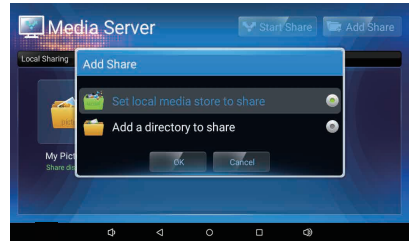 


Figure 1.25 click "OK"

Once confirmed, MA7R tablet will show the local folders, and then tap "start share" on top right corner. (Figure 1.26 and Figure 1.27)

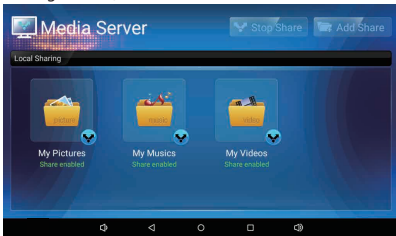 


Figure 1.26 select top right corner "start Share"


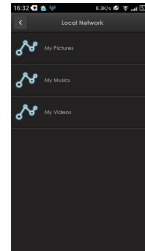 


Figure 1.27 the shared files from MA7R tablet

4.1 Dialer

 When Tablet is inserted to the dock of the telephone, Dialer will automatically start up. You can make a call in Dialer on TELPAD or dock.

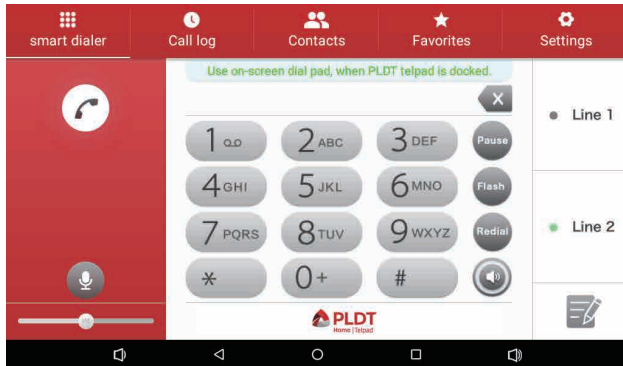

Please take note of the following when using the Dialer:

- ☉ Line 1 is Landline.
- ☉ Line 2- is VoIP (requires network support).

4.1.1 Call Log

You can check both received calls and missed calls.

4.1.2 Contacts

 
You can view, add, delete or edit contact information.

4.1.3 Favorites


You can add regular contacts to Favorites for quick dialing.

4.1.4 Settings

1. Smart Dialer can be downloaded and installed onto your Smartphone from Google Play Store (Android) and Apple App Store (iOS). When your mobile device and TELPAD are in same Wi-Fi network, scan the QR code on TELPAD to pair with it.

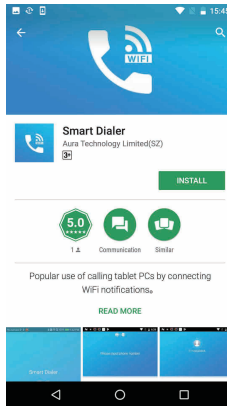

 2. Account Management: To sync Contacts, Call Log and Favorites to Smartphone. Please go to Dialer → tap Settings → tap Account Management → enter account name and password → tap Log In

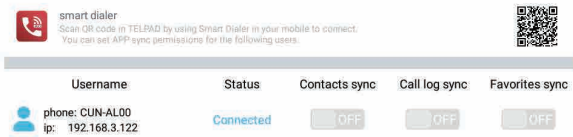


The image shows a mobile application interface for 'smart dialer'. At the top left is a red telephone icon with 'SD' on it. To its right, the text reads 'smart dialer' followed by instructions: 'Scan QR code in TELRAD by using Smart Dialer in your mobile to connect. You can set APP sync permissions for the following users.' A QR code is positioned on the right side. Below this is a table with columns for 'Username', 'Status', 'Contacts sync', 'Call log sync', and 'Favorites sync'. The first row shows a user with 'phone: CUN-AL00' and 'ip: 192.168.3.122', a status of 'Connected', and three 'OFF' toggle switches for the sync options.

Username	Status	Contacts sync	Call log sync	Favorites sync
phone: CUN-AL00 ip: 192.168.3.122	Connected	OFF	OFF	OFF



 To set the name of your TELPAD according to need, please go to Dialer → tap Settings → tap Set the name of the Local → enter a name for your TELPAD → tap OK.

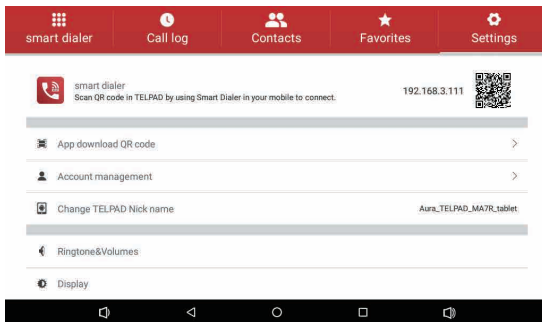

3. To make quick adjustments of “Ringtone & Volumes, Display, Security, Wi-Fi, Mobile and select Area Codes” in Dialer Settings.

4.1.5 Account Synchronous

Please go to Dialer → tap Settings → tap Account synchronous → Add account. The account contacts will be synchronized onto TELPAD.

4.1.6 White List / Do Not Disturb

 
1. White List: You can add contacts to the White list so that their calls can come in even when TELPAD is on Do Not Disturb mode. Please go to Dialer → tap Settings → tap Not Disturb → tap White List → add contacts.
2. Do Not Disturb: Please go to Dialer → tap Settings → tap Black List / White List / Do Not Disturb → tap Settings → turn on Do Not Disturb and set Start time and End time.

Incoming calls will be silenced during the schedule, except for those from contacts on the White list.

4.2 Smart Dialer

Smart Dialer is a wireless Dialer App which can be installed on both Android and iOS mobile devices. It can be paired with Dialer on TELPAD over the same Wi-Fi network connection to accomplish the following functions.

1. Dial out and answer incoming calls remotely;
2. Adjust the volume of speaker on TELPAD remotely;
3. Sync and manage Contacts, Favorites and Call Log on TELPAD.

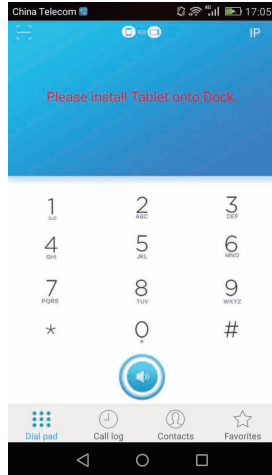

5.1 Tablet not Powering up

- 5.1.1. Press Tablet power key and check whether the PLDT TELPAD logo appears upon initialization.
- 5.1.2. If the Android™ Tablet doesn't launch, connect the Tablet to the power supply through the dock.
- 5.1.3. If the problem still exists, please contact the PLDT Business office.

5.2 No Dial Tone

- 5.2.1. If there is an electronic device emitting radio frequencies near you, switch it off or put it away from the Tablet.
- 5.2.2. Remove any peripheral equipment such as DSL splitter or fax machine and connect your phone directly to the modular box.
- 5.2.3. If the problem still exists, please contact the PLDT Business Office.

5.3 Distorted Audio on Speaker

- 5.3.1. If there is an electronic device emitting radio frequencies near you, switch it off or put it away from the Tablet.
- 5.3.2. Remove any peripheral equipment such as DSL splitter or fax machine and connect your phone directly to the modular box.
- 5.3.3. If the problem still exists, please contact the PLDT Business Office.

5.4 Tablet Dialler cannot Make a Call

- 5.4.1. Check if there is a dial tone. If there is none check your RJ11 connection and make sure it is properly connected.
- 5.4.2. Look at your screen and make sure that the Dialer is set to Line 1; otherwise, touch the Line 1 button. Make sure that the screen shows the message "TELPAD is on the dock".
- 5.4.3. If the problem still exists, please contact the PLDT Business Office.

5.5 No Audio Response in the Handset

- 5.5.1. Check if the RJ9 cable is properly connected.
- 5.5.2. Unplug and re-plug the coiled cable to eliminate the possibility of a loose RJ9 connector.
- 5.5.3. Try a different telephone unit, if possible, to check if it's a line problem.
- 5.5.4. If the problem still exists, please contact the PLDT Business Office.

<p>How will my device receive notifications from the TELPAD?</p>	<p>Your device must be connected to the TELPAD via Bluetooth pairing. Once connection is established ,TELPAD will send notifications with attached captured images (internet connection is required for both party).</p>
<p>FAQs for DLNA Feature</p>	<p>1. How to configure connection between TELPAD and my device(Smartphones) for successful DLNA display? Solution: First ensure good internet connection for both devices(they must connect to the same network). Secondly, You must install imediashare(to access video/photos in your gallery) and flippo TV(to access video streaming) applications available in Play store/App store.</p>
	<p>2. The music, pictures or video files in MA7R tablet can't be shared on Mobile phone once DLNA connected. Cause: The DLNA setting may not open file sharing. Solution: Please add and open file sharing for "Media server" in the "eHomeMediaCenter" applications interface.</p>
	<p>3. MA7R Tablet can't push the music and video files to mobile phones by "eHomeMediaCenter". Cause: The "eHomeMediaCenter" application on MA7R tablet does not support push function. Solution: Please download "Imedia share" application on your mobile phone.</p>
	<p>4. The shared or pushed videos are in slow-moving when they are playing at receiving end. Cause: It is caused by poor internet connection. Solution: Secure a good internet source.</p>

<p>TELPAD can't work when tablet is inserted into dock phone.</p>	<p>Cause: It may be caused by the poor contact between Dock Phone and Tablet. Solution: First check if there is obvious obstruction/blockage then try cleaning the pins using a clean cloth or brush to remove dust.</p>
<p>There is no sign when tablet is charged by adaptor.</p>	<p>Solution: -Check cable and adapter connections.</p>
<p>Inserted micro SD card is unrecognizable</p>	<p>Cause: It may be the poor contact between SD card and tablet or SD card has been damaged. Solution: - Please pull SD card out and re-plug it into tablet; - Please change another good SD card; - Please restart tablet and re-plug SD card.</p>
<p>The camera can't capture photos.</p>	<p>Cause: It may be caused by the wrong configuration of cameras. Solution: - First check camera settings, then close the camera and restart it.</p>
<p>The adaptor charging is unstable once connected.</p>	<p>Cause: Loosed connection between DC cable and dock. Solution: -Check the connection and the cables if properly installed.</p>

<p>The TELPAD'S Bluetooth can't be paired with other devices.</p>	<p>Cause: Bluetooth setting is incorrect or bluetooth is hidden. Solution: Check bluetooth settings; Set the bluetooth of the device to "visible to other devices."</p>
<p>Unresponsive TELPAD's touch panel.</p>	<p>Cause: TELPAD may be on standby mode or TELPAD is locked. Solution: Unlock the TELPAD in case is still unresponsive try to restart the TELPAD.</p>
<p>The tablet can't be turned on</p>	<p>Cause: It may be caused by the low battery of tablet or the power key has been damaged. Solution: Please check if power key has been damaged or not; Please recharge tablet with adaptor firstly. And press power key once "in recharge" remark is showing on tablet.</p>
<p>TELPAD can't make calls</p>	<p>Cause: loosened phone line cable Solution: Check the phone line cable connection to the dock</p>
<p>TELPAD can't answer incoming calls</p>	<p>Cause: It may be caused by the poor contact of phone line cable. Solution: Please check if phone line cable has been connected well or change another good one.</p>

<p>The dock phone can't be placed steady.</p>	<p>Cause: It may be caused by the unsteady silicone foot pad on the back of dock phone. Solution: -Please check if the silicone foot pad on the back of dock phone is properly installed.</p>
<p>The speaker box of dock phone can't work.</p>	<p>Cause: Adaptor is not connected properly. Solution: - Check the adaptor connection; - Check the power key function.</p>
<p>TF card in tablet can't be played.</p>	<p>Cause: TF card is not properly installed in TF slot. Solution: - Check TF card slot and replay it in the tablet.</p>
<p>Home Control Feature</p>	<p>Does the Home control application support all television brands and models? answer: Home control supports most "popular" brands and models.</p>
<p>Home Control Reservation Setup</p>	<p>Question:My Reserved controlled Setup did not take effect,What is wrong with my device? Solution:Check the following settings if properly configured Time → Zone → Device → Signal → exact day of week and also check the Line Of Sight between the Telpad and the device to be controlled(since the technology used is Infrared transmission there must be Line of Sight between devices approximately 10 meters).</p>

Please read the following instructions carefully. Abide by the safety warnings described in order to use the device safely and properly as it is designed for. These instructions apply to the whole device including all the accessories.

Basic Requirements

- ⊗ Keep the device dry at all times and prevent from any collision with other objects, including during storage, transportations, and usage of the device.
- ⊗ Please do not disassemble the device in any case. Contact an authorized service center for repair and/or assistance of any kind.
- ⊗ An organization or individual cannot change the mechanical, safety, or performing design of the device without authorization.
- ⊗ Please abide by all related laws and regulations, and respect the legal rights of other people when using the device.
- ⊗ When making a call, please do not touch the pogo pin connector in the dock.

Environmental Requirements for Using the Device

- ⊗ Before connecting and disconnecting cables, stop using the device, and then disconnect it from the power supply. Ensure that your hands are dry during operation.
- ⊗ Keep the device far from sources of heat and fire, such as a heater or a candle.
- ⊗ Keep the device far from electronic appliances that generate strong magnetic or electric fields, such as a microwave oven or a refrigerator.
- ⊗ Place the device on a stable surface.
- ⊗ Place the device in a cool and well-ventilated indoor area. Do not expose the device to direct sunlight.
- ⊗ Keep the ambient temperature between 0°C and 35°C while the device is being charged.
- ⊗ Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.
- ⊗ Do not block the openings on the device with any object. Reserve a minimum space of 10 cm around the device for heat dissipation.
- ⊗ Do not place any object (such as a candle or a water container) on the device. If any foreign object or liquid enters the device, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.
- ⊗ During thunderstorms, power off the device, and then remove all the cables connected to it to prevent it from getting damaged due to lightning strikes.

- Never install telephone wiring during thunderstorm
- Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch exposed (insulation broken) telephone wires or terminals unless the telephone line has been disconnected from the network interface

Precautions for Using Wireless Devices

- When using the device, ensure that the antenna of the device is at least 20 cm away from all persons.
- Do not use the device where using wireless devices is prohibited or may cause interference or danger.
- The radio waves generated by the device may interfere with the operation of electronic medical devices. If you are using any electrical medical device, contact its manufacturer for the restrictions on the use of the device.
- Do not take the device into operating rooms, intensive care units (ICUs), or coronary care units (CCUs).

Areas with Inflammables and Explosives

- Do not use the device where inflammables or explosives are stored, for example, in a gas station, oil depot, or chemical plant. Otherwise, explosions or fires may occur. In addition, follow the instructions indicated in text or symbols.
- Do not store or transport the device in the same box as inflammable liquids, gases, or explosives.

Accessory Requirements

- Use only the accessories supplied or authorized by the device manufacturer. Otherwise, the performance of the device may be affected, the warranty for the device or the laws and regulations related to telecommunications terminals may become null and void, or an injury may occur.
- Do not use the power adapter if its cable is damaged. Otherwise, electric shock or fire may occur.
- Ensure that the power adapter meets the specifications indicated on the device nameplate.
- For electric plugs, the socket-outlet should be installed near the device and should be easily accessible.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the original time, replace the battery.

- ⦿ Use the appropriate power supply defined in the specifications of the charger. An improper power voltage may cause fire or of the charger.
- ⦿ Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- ⦿ Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- ⦿ If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- ⦿ If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or a fire.
- ⦿ If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- ⦿ Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- ⦿ Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Prevention of Hearing Damage

- ⦿ Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

- ⦿ Keep the device and its accessories out of the reach of children. Otherwise, they may damage the device and its accessories by mistake, or they may swallow the small components of the device, causing suffocation or other dangerous situations. Maintenance if the device is not used for a long time, power it off, and then remove all connected cables.
- ⦿ If any exceptional event occurs, such as if the device emits smoke, unusual sounds or smells, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.

- If the device screen is damaged, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.
- Do not trample, pull, or over bend any cable. Otherwise, the cable may get damaged, causing malfunction of the device.
- Before cleaning the device, stop using it, power it off, and then remove all the cables connected to it.
- Use a clean, soft, and dry cloth to clean the device shell. Do not use any cleaning agents or sprays.

Emergency Call

- You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions.

You should not rely solely on the device for essential communications.



Disposal and Recycling Information

This symbol on the device (and any included batteries) indicates that the device (and any included batteries) should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of its life. For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- To secure your personal information and downloaded applications, it is highly suggested that the user downloads appropriate security and/or anti-virus applications.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.

Copyright © 2014 by AURA Technology Limited.

All rights reserved. No part of this document may be reproduced, distributed, or transmitted in any form or by any means without prior written approval of AURA Technology Limited.

For the device explained in this manual may contain copyright software of AURA Technology Limited. and other possible licensors. No person shall not or is permitted in any manner to reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the software, unless such restrictions are outlawed by related laws or permitted by individual copyright holders.

Notice

Depending on the capacities and settings of the local network, there may be some limitations to using certain software. Thus the functions of the device that rely on certain software might be not fully available or not able to activate. The descriptions enlisted thus may not exactly be reenacted within the device and the accessories purchased. Changes or modifications to the manual may occur without previous notifications or without any liability, by the right reserved to AURA Technology Limited.

Third-Party Software Statement

Any intellectual properties, software, applications of the third-party that are provided with the device are not owned by AURA Technology Limited. Thus there will be no responsibility or liability held towards AURA Technology Limited. for the functions of the software and applications along with warranties and/or support for them. Third-party software and applications services may be changed or concluded at any time. AURA Technology Limited. to the degree allowed by related laws, states that it will not be responsible, liable, or compensate for the services provided by third-party providers. Any aspects of any software and application installed and used on the device, AURA Technology Limited. shall not be held responsible or reliable such as legitimacy or quality of the software/application. The users shall accept the risk of any results caused by the software/application being possibility incompatible with the device. This device runs on Android operating system but there has been appropriate changes made by AURA Technology Limited. Thus this device might not fully support all the functions supported by standard Android operating system. AURA Technology Limited. shall not be liable for any related situations.

Trademarks and Permissions

All the trademarks, products, services and company names mentioned are the property of their respective owners

The information within this manual are provided "AS IS", except required by applicable laws, no warranties of any kind; either expressed or implied, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or information of this manual.

LIMITATIONS OF LIABILITY

In no event shall AURA Technology Limited. be liable for any special, incidental, indirect, or consequential damages or lost profits, business, revenue, data, goodwill or anticipated savings, that arises from the use or misuse of the device. (This limitation shall not apply to liability for personal injury to the degree applicable law rules out such limitation.)

A

About your TELPAD 02

Accessing the Tablet's Settings 22

B

Bluetooth 30

BASIC TROUBLESHOOTING FOR THE TELPAD 87

C

Charging the battery 14

Connecting to or Disconnecting from Computer Using USB 26

Connecting the Tablet to a TV 27

Camera Instructions 36

D

DLNA 66

Dialer 81

Distorted Audio on Speaker 88

DISCLAIMER OF WARRANTIES 103

F

FamChat 60

FAQs 89

G

GETTING STARTED 01

Getting to know your TELPAD 04

Google Services 32

Gmail 35

Camera Instructions 36

H

Home screen 17

Home Control 39

Home Care 52

I

Installation 10

Inputting text 20

Installing or Removing the Micro SD Card 25

INDEX 105

L

Locking and unLocking the screen 19

Languages & Input Method & Account Setting 23

LEGAL NOTICE 101

N

No Dial Tone 88

No Audio Response in the Handset 88

O

Opening and Switching Applications 22

P

Product Specification 07

PERSONAL INFORMATION AND DATA SECURITY 99

S

Setting the Date and Time 24

Smart Dialer 86

T

TELPAD INTRODUCTION 03

TABLET FUNCTIONS 12

Turning the Tablet ON or OFF 13

THE CONNECTION BETWEEN DOCK PHONE AND TABLET 80

Tablet not Powering up 88

Tablet Dialler cannot Make a Call 88

U

Using the touch screen 16

W

Working with the keys 15

Wireless Networks 28

WARNINGS AND PRECAUTIONS 94

Warranty card

NAME:	
TEL. NO.:	
ADDRESS:	
DATE OF PURCHASE:	
VERSION:	
SERIAL NO.:	



TELPAD MA7R USER MANUAL

AURA Technology Limited

FLAT 810,8/F STAR HOUSE, 3 SALISBURY ROAD, TSIMSHATSUI, KOWLOON HONGKONG

E-mail: Support@auratech.hk

for Android™ Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.