

**Smart Page 8 W**

1	GETTING STARTED .....	01
1.1	About Your Smart Page 8 W.....	02
2	SMART PAGE 8 W INTRODUCTION .....	03
2.1	Getting to Know Your Smart Page 8 W.....	04
2.2	Product Specification .....	06
3	TABLET FUNCTIONS .....	09
3.1	Turning the Tablet ON or OFF .....	10
3.1.1	Turning the Tablet ON .....	10
3.1.2	Turning the Tablet OFF.....	10
3.2	Charging the Battery.....	11
3.2.1	Charging the Tablet Battery.....	11
3.3	Working with the Keys.....	12
3.3.1	Using the Physical Keys.....	12
3.3.2	Working the Touchscreen Keys .....	12
3.4	Using the Touch Screen.....	13
3.5	Home Screen.....	14
3.5.1	Getting to Know the Home Screen .....	14
3.5.2	Home Screen Extensions .....	15
3.5.3	Customizing the Home Screen .....	15
3.6	Locking and Unlocking the Screen.....	16
3.6.1	Locking the Screen.....	16
3.6.2	Unlocking the Screen.....	16
3.6.3	Setting up a Screen Lock.....	16

3.6.4 Setting a Screen Timeout Period.....	16
3.7 Inputting Text.....	17
3.7.1 Entering Text Using the On-screen Keyboard.....	17
3.7.2 Cutting or Copying Text .....	18
3.8 Opening and Switching Applications.....	19
3.9 Accessing the Tablet's Settings.....	19
3.10 Languages & Input Method & Account Setting.....	20
3.11 Setting the Date and Time .....	21
3.11.1 To Automatically Set Date and Time.....	21
3.11.2 To Manually Set Date and Time.....	21
3.11.3 Scheduled Power ON/OFF.....	21
3.12 Installing or Removing the MicroSD Card.....	22
3.13 Connecting or Disconnecting from a Computer Using USB.....	23
3.14 Wireless Networks .....	24
3.14.1 Turning Wi-Fi ON or OFF.....	24
3.14.2 Connecting to a Wi-Fi Network .....	24
3.14.3 Turning Open Network Notification ON or OFF.....	25
3.14.4 Adding a Wi-Fi Network .....	25
3.14.5 Forgetting a Wi-Fi Network.....	25
3.15 Bluetooth.....	26
3.15.1 Opening Bluetooth Settings .....	26
3.15.2 Turning Bluetooth ON or OFF.....	26
3.15.3 Changing the Bluetooth Name of Your Tablet.....	26

3.15.4 Connecting to Bluetooth Devices .....	27
3.15.5 Disconnecting from or Unpairing a Bluetooth Device .....	27
3.16 Google Services .....	28
3.16.1 Creating a Google Account .....	28
3.16.2 Using Play Store .....	29
3.16.3 Backing up and Restoring Apps and Settings from a Google Account .....	30
3.17 E-mail .....	30
3.17.1 Opening E-mail .....	30
3.17.2 Gmail .....	31
3.18 Camera Instructions .....	32
3.19 Home Control .....	37
3.19.1 Installation of "Home Control" Apk .....	38
3.19.2 IR Universal Remote .....	39
3.19.3 Reservation .....	41
3.19.4 Mobile Client Setup .....	43
3.19.5 Out Home Control .....	44
3.19.6 Motion Detection .....	46
3.20 Home Care .....	48
3.21 Cast Screen Function Operation Guide .....	56
4 FAQs .....	62

5 WARNINGS AND PRECAUTIONS.....	65
6 PERSONAL INFORMATION AND DATA SECURITY .....	70
7 LEGAL NOTICE.....	72
8 DISCLAIMER OF WARRANTIES .....	74
9 INDEX .....	76



 
## 1.1 About Your Smart Page 8 W

Smart Page 8 W is powered by Android, the world's leader in smart phone technology. With its stunning 8 inch touch screen display, built-in camera, Wi-Fi, access to thousands of free and paid Android Apps, as well as its infrared remote controller and Wi-Fi smart appliance controller, it's definitely a device that brings fantastic user experience to your work and life!






## 2.1 Getting to Know Your Smart Page 8 W

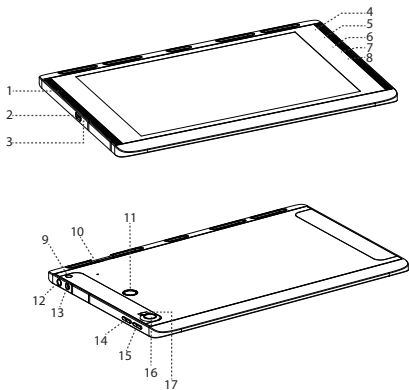

 1. Speaker L
2. USB Port
3. Microphone(tablet)
4. IR1(transmit)
5. Proximity Sensor
6. Light Sensor
7. Front Camera
8. Receiver&Speaker R
9. IR3(transmit)
10. Micro SD Card Slot
11. Power Button
12. IR2(transmit and receive)
13. Earphone Jack
14. Volume Up Button
15. Volume Down Button
16. Rear Camera Flash
17. Rear Camera

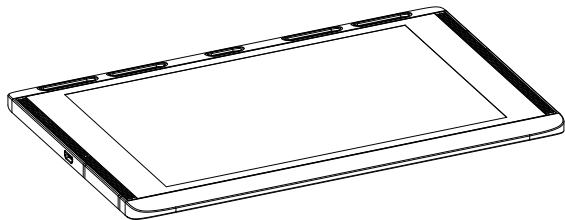

## Accessories



USB Charger



USB Data Cable



Synthetic Leather Case

## 2.2 Product Specification

### GENERAL SPECIFICATIONS AND DISPLAY

DIMENSION	221.5mmX143mmX7.4mm
DISPLAY AND RESOLUTION	8 Inch IPS(1200*1920)
SYSTEM SOFTWARE	Android™ 7.1.2
AIR INTERFACE	Wi-Fi - 802.11a/b/g/n/ac--2.4G/5G
MULTI-TOUCH PANEL	Capacitive 5-Points-Touch
PRIMARY KEYPAD	3 Standard Soft Keys: Home, Back, Recent Applications
DISPLAY COLOR DEPTH	24-bit
Camera	Rear 13MP camera/front 5MP

### CONNECTIVITY

BLUETOOTH	Bluetooth 4.0 + EDR
USB	Micro USB OTG x 1EA
SPEAKER	8Ω 1Watt x 2EA
MICROPHONE	Built-in-microphone
SENSOR	3-Axis Accelerometer for UI Auto Rotate Ambient Light sensor
AUDIO OUT	Standard 3.5 mm headphone jack

## COMMUNICATION AND ORGANIZER

EMAIL	Protocols: SMTP, POP3 and IMAP4
	Supports Exchange Calendar, Contacts synchronous

## MEDIA PERFORMANCE

VIDEO DECODING	3GP, AVI, MOV, MP4, MKV, TS, FLV, WPG, ASF
AUDIO DECODING	AAC, AMR, FLAC, MID, MP3, OGG, WAV
PICTURE FORMATS	BMP, GIF, JPG, PNG, JPEG
STREAMING MEDIA	RTSP/HTTP, Support Download play, Progressive play

## BATTERY AND POWER

TABLET BATTERY	STD Lithium-Ion Polymer battery, 4800 mAh rechargeable
POWER ADAPTER	Input - 100 -240 Vac, Output - DV DC/5.2V2.1A 10W

## HOME CONNECT AND CONTROL

Cast Screen	Enter Settings' display and launch Cast Screen
Home control	infrared universal remote, Reservation, Outside Home Control, motion detection
Home Care	Bluetooth Weight Scale, Body Temperature Monitor, Family Temperature Manager, Menstrual Cycle, Fertility State



 
## 3.1 Turning the Tablet ON or OFF

### 3.1.1 Turning the Tablet ON

To turn on your tablet, press the Power key.

### 3.1.2 Turning the Tablet OFF

1. Press and hold Power key to open the Tablet options menu.
2. Choose Shut Down.
3. Touch OK to confirm shutdown.

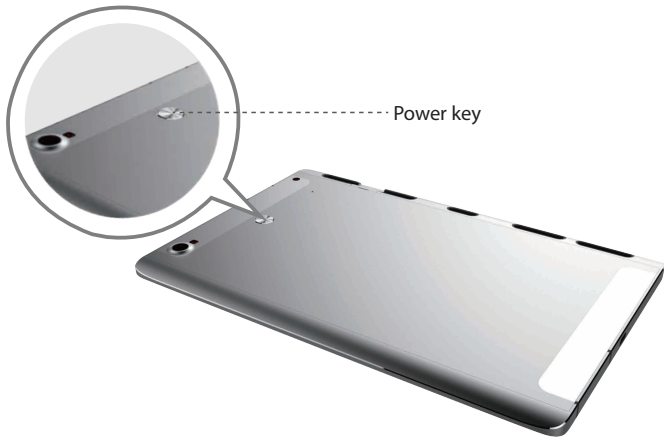

## 3.2 Charging the Battery

### 3.2.1 Charging the Tablet Battery

The Tablet is powered by a rechargeable Li-ion battery. To charge the Tablet, turn it off and connect it to USB charger using a USB cable.





## 3.3 Working with the Keys

### 3.3.1 Using the Physical Keys

#### Power Button

- Press and hold power button to:
  1. power off; 2. reboot; 3. airplane mode;
- Press shortly to lock/unlock the screen.

#### Volume Up/Down

 
- When the Smart Page 8 W is ringing, press any of the volume buttons if you want to mute the ringer.
- On the Home screen, press "Volume Up/Down" to increase or decrease the ringtone volume, or set the Smart Page 8 W to silent mode.
- When using other applications, press "Volume Up/Down" to control the volume of music, spoken directions, and other audio sounds.
- Press and hold "Volume Up/Down" to immediately adjust the ringtone volume to the maximum or minimum.

Power button



Volume down

Volume up

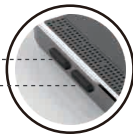

### 3.3.2 Working the Touchscreen Keys



Back

Touch to return to the previous screen.

Touch to exit from the running application.

If the on-screen keyboard is open, touch to close the keyboard.



Home

Touch to open the Home screen. It will bring you to the first panel of the Home screen.



Navigation

Touch to open a list of thumbnail images displaying recently operated apps.

Touch the thumbnail image of the app to open it.

Touch and hold and flick off leftward or rightward to remove the app from the list.

## 3.4 Using the Touch Screen



### Touch

By touching an item, you can select the item or launch it. For example:

- ☉ Touch the on-screen keyboard to insert text and/or characters.
- ☉ Touch an application icon to launch it.



### Touch and Hold

Touching and holding items will activate them. For example:

- ☉ Touch and hold an application/widget to move it.
- ☉ Touch and hold on a field and a menu with options will pop up.



### Drag

Touch and hold an item, move your finger on the screen to the target position.

- ☉ Dragging a shortcut icon to the trash will delete it.



### Flick, Slide, Swipe

Change screens by flicking, sliding, and swiping your finger on the screen. For example:

- ☉ Slide your finger to unlock the screen.
- ☉ Flick and/or swipe your finger to scroll the screen or menu, to move from screen to screen, or to view next object in the gallery.



### Pinch

Using two fingers (like your thumb and index finger), pinching inward will cause the screen to zoom out; pinching outward will cause the screen to zoom in. For example:

- ☉ Pinch outward to see zoomed in details of a photo in Gallery.
- ☉ Pinch inward to zoom out and see the whole page of a browser.

 


## 3.5 Home Screen

The Home screen is the starting point in using the Tablet.

Touch the Home key to display the Home screen. You can customize the Home screen with various wallpapers and create shortcuts for items you want to easily access.

### 3.5.1 Getting to Know the Home Screen

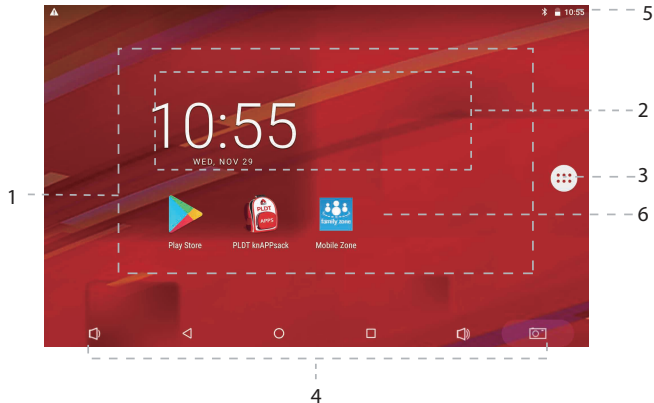


1. Main display area
2. Clock Widgets
3. Application Button
4. Touch Screen Keys
5. Status Bar
6. Short Cut Buttons

1	Main display area: This area displays application shortcuts, widgets, and other items that can be easily accessed by touching them.
2	Weather & Clock Widgets: The weather widget informs you of the time, date, and weather in your location. It can be customized based on your preference.
3	Short Cut Buttons: These are shortcuts for various applications. You may change and customize these according to your needs.
4	Touch Screen Keys: Back, Home, Navigation, Volume Down, Volume Up
5	Status bar: It shows the status of the device such as Wi-Fi connection status, battery status, and other information. You can touch to open a more detailed status menu.
6	Applications button: Touch to open the Applications screen, where you can view the applications installed on the Tablet. Touch any application icon to run it.

### 3.5.2 Home Screen Extensions

Slide your finger horizontally across to the left or the right of your main Home screen to see your additional home screens. These screens provide more space for shortcuts or widgets. The small indicator shows the current position.

The  Home touchscreen button brings the screen back to your main Home screen.

### 3.5.3 Customizing the Home Screen

There are two ways to change your wallpaper:

1. Press and hold blank space on home screen, the main screen display area interface will zoom out. Three buttons: WALLPAPERS, WIDGETS and SETTINGS appear under the main display area. Click WALLPAPERS and choose one of picture from camera gallery, Wallpaper gallery or the video wallpaper.

2. Click Menu key and touch Gallery, choose one of the picture as your Tablet's wallpaper.

## 3.6 Locking and Unlocking the Screen

### 3.6.1 Locking the Screen

- When the Tablet is powered on, press the Power key and the screen will turn off and lock.
- When the Tablet is left idle for a specified time period that you have set, the screen will automatically turn off and lock.
- Always lock the screen to save the battery or prevent accidental taps when the Tablet is not in use.

### 3.6.2 Unlocking the Screen

- When the screen is off, press the Power key to turn it back on, and then unlock the screen.
- If you have not set a screen lock, the screen will just turn back on when you press the power button.
- If you have set up a screen lock, you will be asked to input the relevant unlocking pattern: slide, face, voice, pattern, PIN or password to unlock it.

### 3.6.3 Setting up a Screen Lock

- To set up a screen lock, touch the Applications key from the Home screen.
- Go to Settings > Personal > Security.
- To set a screen lock as slide, face, voice, pattern, PIN or password according to screen instructions.

### 3.6.4 Setting up a Screen Timeout Period

- To set the time between the last screen touch or key touch and automatic screen lock, go to Home screen touch the Applications key, and touch Settings > Display > Sleep.







You can enter and edit text in text fields and use menu commands to cut, copy, and paste text within or across applications.

### 3.7.1 Entering Text Using the On-Screen Keyboard

To open the on-screen keyboard, touch a text field where you want to enter text.

To switch the input method, touch the  icon located at the lower right corner of the keyboard.

The following section takes the Android™ keyboard as an example.

- When you are typing, the characters you are entering will appear in a line above the keyboard, along with some suggestions for the word you are typing. Press space or a punctuation mark to enter what you are typing, or touch the suggestion you want to enter. You can touch and hold the leftmost word to save it to the dictionary.
  - To capitalize the letter you are about to type, touch the upward arrowhead key  once. To capitalize all the letters, touch the upward arrowhead key  twice.
  - When you touch a key, a larger key will show up briefly over the keyboard. Keys with alternate characters display an ellipsis (...) below the character.
  - Touch and hold a vowel or the C, H, or S key to open a small window where you can touch an accented vowel or other alternate letters.
  - Touch and hold the Period key (.) to open a small window with a set of common symbol keys.
  - Touch the DEL  key to delete a character to the left of the cursor. Touch and hold the  key to delete all characters to the left of the cursor.
  - Touch the Symbols key  to switch to the numbers and symbols keyboard, and touch the alphabet key (ABC) to switch back.
  - Touch and hold almost any of the number and symbol keys to open an array of additional symbols.
- To edit the text you have entered, touch to move the cursor to the location where you want to add or delete text. The cursor is a vertical bar that designates where the text you type or paste is inserted.
- To close the keyboard when you are done typing, touch Go/Done button on the keyboard. Or touch the  icon on the lower left corner of the touchscreen.

### 3.7.2 Cutting or Copying Text

To quickly cut or copy all the text in a text field:

3.7.2.1 Touch and open the text field that contains the text that you want to cut or copy.

3.7.2.2 Touch and hold the text field to display the Edit text menu.

3.7.2.3 Touch Select all, Cut all, or Copy all.

3.7.2.4 Touch Cut or Copy to cut or copy the text.

To cut or copy selected text in a text field:

1. Touch and hold the text that you want to cut or copy. Once the text is highlighted, tabs will appear at the ends of the text, as well as the editing command menu.

2. Drag the respective tabs left and/or right to select the full text you want to cut or copy. The text between the tabs will appear highlighted.

3. Touch Cut or Copy to cut or copy the selected text.

The cut or copied text will be stored in a temporary area so you can paste it into another text field.

In order to paste the text, you must have cut or copied the text at least once. Once you have cut or copied the text, you can paste it multiple times.

To paste the most recent text that you have cut or copied into another text field:

1. Touch the text field where you want to paste the text.


2. Touch the location where you want to paste the text. A tab will show up.

3. Touch the tab and the Paste option will show up.

 
4. Touch Paste.

## 3.8 Opening and Switching Applications

To open an application, touch the shortcut on the Home screen, or go to the Applications screen by touching the Application button on the Home screen .

To open and switch to a recently used application, touch the  key at the bottom of the touchscreen.

The list will open on the right hand side. Touch the thumbnail of the application you want to access.

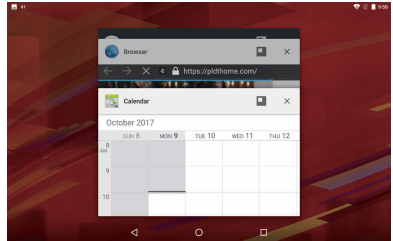

## 3.9 Accessing the Tablet's Settings

To access the Settings to view or change your wireless and cellular networks, sound and display, location and security, applications, language and keyboard, date and time, and other settings:

3.9.1 From the Home screen, touch the Status Bar, touch menu key on top right corner of screen.

3.9.2 From the Home screen, touch the Application button and touch Settings shortcut.

3.9.3 If you recently have accessed the Settings, you can touch the Navigation key on the touchscreen to display the list, and touch Settings in the thumbnails list that opens.




## 3.10 Languages & Input Method & Account Setting

### 3.10.1 Languages Setting

1. Open setting list.
2. Click languages & input.
3. Select language from the following scrolling list.

### 3.10.2 Input Method Setting

1. Open setting list.
2. Click languages & input.
3. Click keyboard & input.
4. The default input method is English(United States)-Android keyboard(AOSP). It will be added into the input method list automatically when you have installed other input method.
5. You can open right side  to select or cancel the relative input methods.

### 3.10.3 Setting to Add Account

1. Open setting list.
2. Click Add Account.
3. Google, Corporate, IMAP will show in the popping up interface.
4. Click GOOGLE to register or log in Google account.

## 3.11 Setting the Date and Time

### 3.11.1 To Automatically Set Date and Time:

1. Open the Settings list.
2. Touch Date & time.
3. Check the box for Automatic date & time.
4. Touch Select time zone, then scroll down and select the correct time zone from the list.
5. Choose whether or not to set the time to display in 24-hour format, check or uncheck the box to enable or disable this option.
6. To choose your preferred date format, choose from the options provided.
  - ⌚ When the time provided by the network is automatically used, you cannot set the date, time, and time zone by yourself.

### 3.11.2 To Manually Set Date and Time:

 
1. Open the Settings list.
2. Touch Date & time.
3. Touch Set date, then scroll down the roll to adjust the date, month, and year. Touch Done when finished.
4. Touch Select time zone, scroll down and select the correct time zone from the list.
5. Touch Set time, then scroll down to adjust the hour and minute. Touch done when finished.
6. To choose whether or not to set the time to display in 24-hour format, check to enable or uncheck to disable.
7. To choose your preferred date format, choose from the options provided.

### 3.11.3 Scheduled Power ON/OFF

1. Power on: The date and time of scheduled power on can be set at anytime from Monday to Sunday.
2. Power off: The date and time of scheduled power off can be set at anytime from Monday to Sunday.

## 3.12 Installing or Removing the Micro SD Card

Place micro SD card on card tray holder, and insert it into card slot in the correct direction as shown in the following figure.

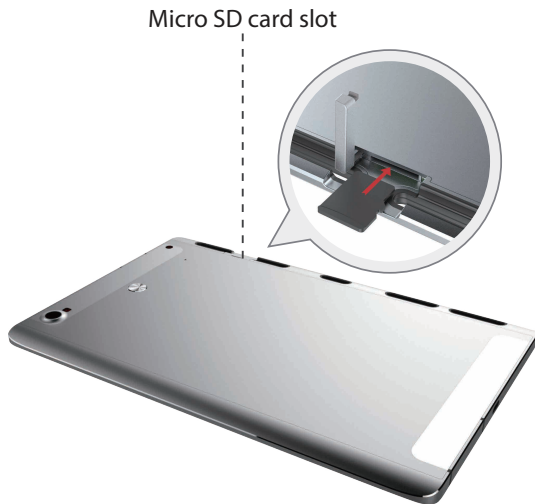

- Remove the micro SD card by gently pulling out the card tray holder from tablet, take out the micro SD card and then insert card tray holder into card slot again.

## 3.13 Connecting to or Disconnecting from Computer Using USB

### 3.13.1 Connecting the Tablet to a computer using USB cable:



1. Use the appropriate USB cable (micro USB connector) to connect the Tablet to a USB port on your computer. Once it is properly connected, the Tablet displays a notification indicating that the USB is connected.
2. Touch the top right corner to open the Status Bar and touch USB connected in the Notifications list.
3. Touch Turn on USB storage to confirm transferring of music, pictures, and other files between the Tablet storage or micro SD card storage and the computer.

3.13.2 To disconnect the Tablet from the computer safely and to avoid any loss of information, follow the computer operating system's instructions to disconnect USB devices, and additionally follow the steps below:

1. Open the Status Bar by touching the top right corner.
2. Touch Turn off USB storage in the Notifications list.
3. Touch Turn off USB storage in the dialogue that opens.

## 3.14 Wireless Networks

The tablet is able to connect to various wireless networks and devices. Including Wi-Fi data networks, and Bluetooth devices such as headsets for voice and data transmission.

### Wi-Fi

Wi-Fi is a wireless networking technology. Wi-Fi technology can provide wireless Internet connection over distances of up to 100 meters, however the connectivity of the Wi-Fi depends on the Wi-Fi router, and the surrounding environment in which it operates.

By accessing a wireless access point or "hotspot", the tablet can be connected to the internet. Some access points are open and can be easily connected to, but others are hidden or have security protection such as authentication or encryption, which will require configuration to gain access.

#### 3.14.1 Turning Wi-Fi ON or OFF

1. Setting → WiFi → touch ON/OFF button to turn ON/OFF WiFi.
2. Slide down the status and touch Wi-Fi icon to turn on it.

#### 3.14.2 Connecting to a Wi-Fi Network

When the Wi-Fi is turned on, the device searches for available networks accessible within range.

Inside Settings, when the Wi-Fi is turned on, the available networks will be listed on the side.

- Select the network you would like to connect to.
- If the network is open, it will automatically connect as soon as you select it.
- If the network is secured, there will be a lock icon beside the name. Enter the correct password to connect.  
To view detailed information about the network the tablet is connected to, touch the name of the network and the information will show up such as IP address, speed, etc.

### 3.14.3 Turning Open Network Notification ON or OFF

When Wi-Fi is already on, touch Network notification to check or uncheck the box to turn the open network notification on or off in the Wi-Fi settings list. The tablet will display or stop displaying notifications in the status bar when the device detects open networks in range.

### 3.14.4 Adding a Wi-Fi Network

- To add a Wi-Fi network, firstly follow the above steps to turn the Wi-Fi on, and then follow the steps listed below:
- Under the Wi-Fi settings list, scroll down and touch Add Wi-Fi network.  
Network SSID: Enter the name (SSID) of the network in the text field.  
Security: Select the security scheme in the menu that opens.
- Password: Enter any required security credentials.  
Touch Save to finish adding the Wi-Fi network.

### 3.14.5 Forgetting a Wi-Fi Network

- Tap Settings > Wi-Fi.
- Touch the network name you want to remove from the Wi-Fi networks list.
- Touch Forget in the menu that opens.

## 3.15 Bluetooth

Bluetooth is a wireless communication technology for exchanging information over short distances. The connectivity between the Bluetooth devices may be affected by their surroundings and is altered or reduced by obstacles such as walls or other electronic devices.

### 3.15.1 Opening Bluetooth Settings

To configure the Bluetooth settings of the tablet in the Bluetooth settings list:

- Touch and open the Settings from the Home screen or Applications screen.
- Touch Wireless & networks, and touch Bluetooth settings.

### 3.15.2 Turning Bluetooth ON or OFF

- Open the Settings.
- Under Wireless & Network > Bluetooth.
- Touch the On/Off button to activate or deactivate Bluetooth.
- To extend the battery life of the tablet, turn Bluetooth off when not in use.

### 3.15.3 Changing the Bluetooth Name of Your Tablet

The Bluetooth name of your tablet is the identification of your device to other Bluetooth Devices.

- Open the Settings.
- Under Wireless & Network touch Bluetooth.
- Touch the Menu button at top right corner of screen.
- Touch Rename tablet in the options given.
- Type the new name in the window prompted.
- Touch Rename to confirm change.

### 3.15.4 Connecting to Bluetooth Devices

#### Pairing with a Bluetooth device

Search for a Bluetooth device, pair with it, and exchange information between devices.

- ☉ Open the Settings.
- ☉ Under Wireless & Network touch Bluetooth.
- ☉ Touch the name of your device to make it visible to nearby devices.
- ☉ Touch Search for devices at top to begin or reinitiate search for other devices.
- ☉ Touch the name of device that you want your device to pair up with.
- ☉ Window will show up asking for confirmation, touch Pair to confirm.

#### Paired devices

Once a device is paired, the name of the newly paired device will show up under a separate category as Paired devices. After a device has been paired, it stays paired unless the pairing is disconnected manually.

### 3.15.5 Disconnecting from or to be Unpaired from a Bluetooth Device

To automatically disconnect your tablet from a paired device, simply turn off the tablet's Bluetooth or the target device.

To manually disconnect your tablet from a paired device or to be unpaired from this device by erasing all the pairing information:

 
- ☉ Touch Unpair.



### 3.16.1 Creating a Google Account

When accessing a Google service for the first time with your device, you will be asked to sign in using your Google account.

Make sure the Tablet is connected to a network to sign in or create a Google account.

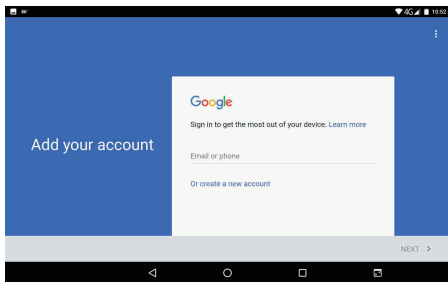

If you already have a Google account, simply enter your information and sign in.

If you do not have an account, to create a Google account:

1. When asked if you have a Google account or not, touch New.
2. Insert your last and first name, touch Next.
3. Type in the e-mail address you would like to use, and touch Next.
4. Insert the password, making sure that you correctly type in the password twice when prompted.
5. Type in your Recovery e-mail address and set up a security question to help you access your account in case you forget your password.
6. Check the box that to agree to the Google Terms of Service and additional privacy policies, and touch "I accept".

7. Input the authentication keys that appear. Your new Google account has been successfully created!

### 3.16.2 Using the Play Store

You can access thousands of easily downloadable applications and games for your Tablet via the Google Play Store.

#### 3.17.2.1 Searching for Applications

 
There are several ways to search for applications in the Play Store, through:

1. Featured applications.
2. Categories.
3. Search function.
4. Your downloads.

☉ Within the each option, you can easily search for applications by name or keyword.

#### 3.16.2.2 Installing an Application

1. Go to Play Store from the Home screen or Applications screen.
2. Touch a category, and then touch the application you want to download.
3. To install, touch FREE (for free apps) or Buy (for paid apps) to begin download and installation.
4. Download progress can be checked from the notification panel. Most applications will be downloaded within seconds.
5. After the application has been downloaded and installed on your Tablet, the content download icon appears in the Status bar.
6. To download and install an application from sources other than the Play Store, touch Settings > Security, and check the box for Unknown sources.

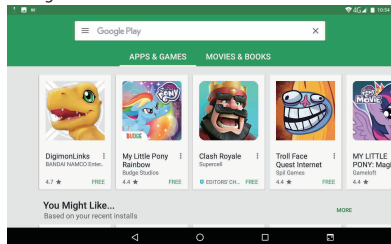

### 3.16.2.3 Uninstalling an Application

1. Go to Play Store, touch the My apps button.
2. Touch the application to uninstall, and then touch Uninstall.
3. When asked for confirmation, touch OK to remove the application from your Tablet.

### 3.16.3 Backing up and Restoring Apps and Settings from a Google Account

1. Access the Settings list from the Home screen or Application screen.
2. Scroll down the Personal section, and touch Backup & reset.
3. Check the box for Back up my data and Automatic restore.

 
## 3.17 E-MAIL


### 3.17.1 Opening E-mail

Touch E-mail icon on the Home screen or on the Applications screen to launch it.

### 3.17.2 Gmail



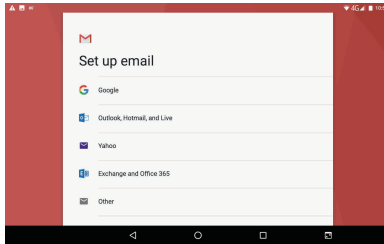

Gmail can manage all the e-mails. Users can set the email address according to account type, and then log in.




1. Access Gmail application.
2. Select an e-mail address.
3. Set up e-mail according to user needs.
4. One can add Google existing account or creating a new account.
  - 4.1 Input the existing account and password, accept the terms of service, and log in.
  - 4.2 Click to create a new account. One can follow the on-screen instructions to finish the register.
5. Add & delete Google account
  - 5.1 Login your mailbox, click account name to "add account" or "manage accounts". Tap "manage account" and choose the account you want to remove. Click the icon on the top right corner, tap "remove account" to delete this account.
  - 5.2 Click "Settings" and tap "Accounts" to "add account" or remove email account. Select the email account you want to remove, click the icon  on the top right corner, tap "remove account" to delete it.


## 3.18 Camera Instructions

 
### 3.18.1.Tool Options:

1.Click  on the top right corner:  front and rear camera switching  flashing light  grid



 timer  3-dimensional noise deduction.

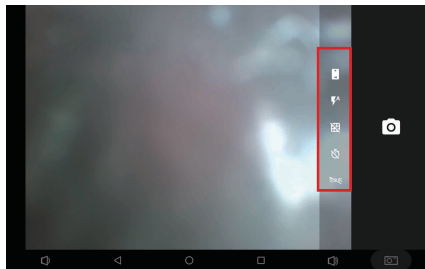


 
2. Before you tap  to take a photo, you can tap on the screen to focus. Photos can be viewed in Gallery.

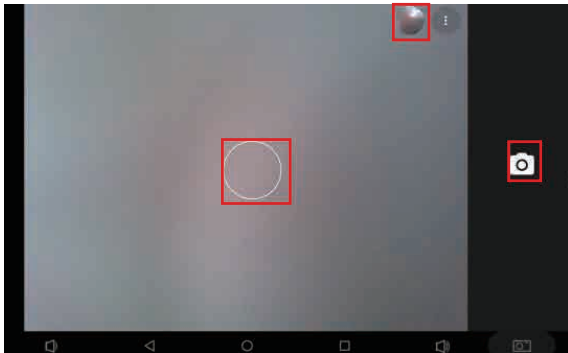


  3. Slide to the right on the screen to bring out Camera, Video and Settings buttons.

 Click  to record a video. When recording, you can tap on the screen to snapshot. Tap  to save a video, then you can view it in Gallery.

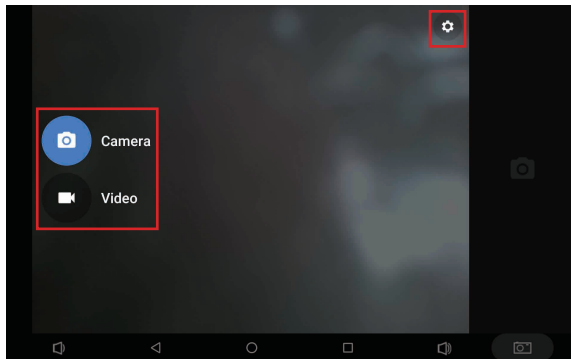


 4.A tap on  will open the setting interface. It mainly includes Resolution & quality, Capture Sound, Save location, Picture and Video Save Location, Advanced, Restore Default Settings.

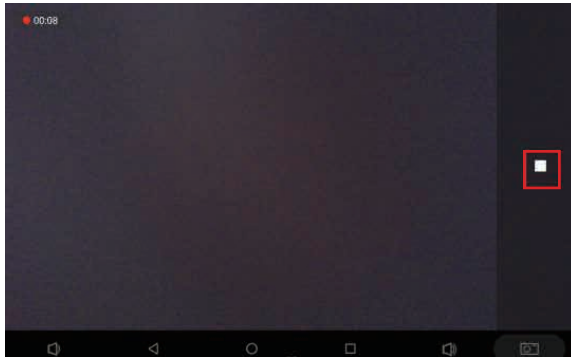




 5.Resolution & quality settings include: pixel of Back camera photo and Front camera photo; display quality of Back camera video and Front camera video.

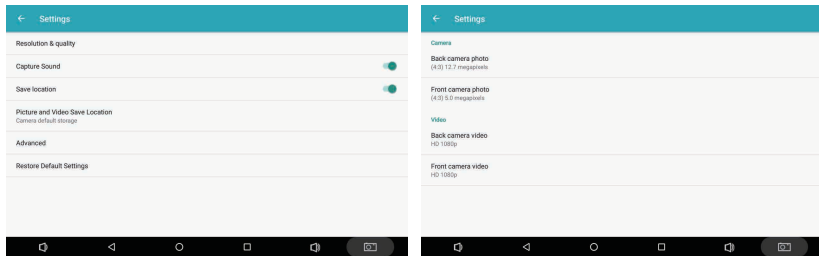


 6.Advanced settings include color processing, white balance and anti-banding.

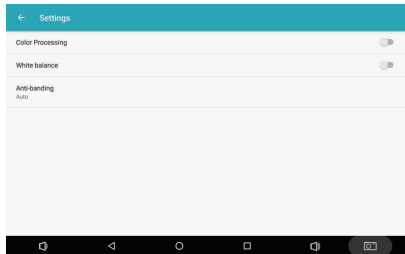

### Terms of Use

 The Home Control app is a Home Automation System which is comprised of the following: IR remote controller, Reservation (Timer)control, Camera motion detection and Outside-Home Control features which are integrated and provided for user's convenience. User has to consider the hardware configurations like IR sensor direction, distance from tablet to target device, camera direction and power supply for the tablet. The power stability of tablet should be considered if tablet is used continuously for a long time and also the user can set tablet in "stay awake mode" to keep the Home control running. User has to verify the software configuration like IR signals, Internet connection, and personal use case. The Out-Home control function may not work properly depending on the following factors: client mobile device, unstable network environment, network timing or Internet Service provider. The Outside-Home Control works only on Android devices which are equipped with Google service. The push message used for Outside-Home Control is provided by Google™, GCM (Google Cloud Messaging) message do not guarantee high percentage of delivery. User needs to retry if the message/request is not delivered successfully. For the service implementation, only the latest image captured and remote controller status will be stored in the server with security code algorithm. User has to carefully manage the connection between "Home Control Host" and "Home Control Client" should be installed on the user's smartphones/Android devices to monitor/control tablet (to register client's device connect to tablet via Bluetooth).

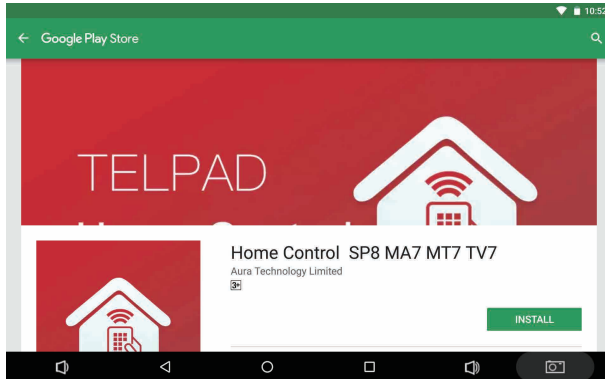


### 3.19.1 Installation of "Home Control" APK.

Find and tap the "Home Control Link" icon in Smart Page 8 W Apps, an option box pops up, select "OK". After user logs in his (her) Google account, Smart Page 8 W screen will jump to "Google Play Store". If the user's "Google Play Store App" is not the latest version, the "Google Play Store App" will exit and update automatically. Click "Home Control Link" again, "Google Play" will enter the latest version and user can download and install "Home Control App".

Remark: This usage may be changed without notification upon application update.

### 3.19.2 IR Universal Remote

 Smart Page 8 W Home control will work with the devices that are already in your home. It can control your TV, Cable Box, Radio, DVD, DVR, VCR, Blu-Ray, CD, Audio, Air Con (A/C), Amplifier and Satellite and much more.

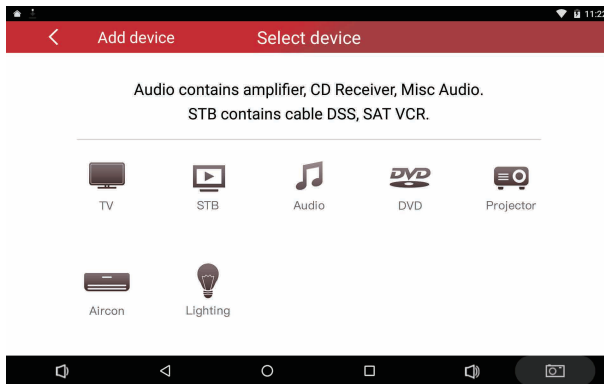

- NOTE: The Home Control operates the same way as an ordinary remote control IR signals. Please be careful not to cover the IR sensor marked with Red of the Smart Page 8 W when you use the IR Remote function. This function may not be supported depending on the model, the manufacturer or service company.

- IR Universal remote Initial Configuration

From the main menu tap → Select '+' → Select Device → Select Brand \* → Select Model → Confirm if signal is working  
\*\* → Save remote with "Remote Name" → Select Zone and tap save → you can find installed IR remote UI.

\* If you device is made by top ranked brands, then check "Show most common models only" option. This will filter out minor provider. There are two search methods available , standard and model search flow. Please use default standard search flow if you are first time to setup. If you want model search, check "Model Search" option, you can search the code with input model name.

- Standard search flow : Optimized and intelligent algorithm to find the right code. User just tap the displayed button and select "Correct" if it is works. If this process fails, it will automatically forward to model search flow.

 
 
- Model search flow : User need to input at least 2 characters for model name of the device, and tap 🔍 . User gets the count of available codes (Interrelated device) for this brand. By using ⏮⏭ and preview command button, it will be able to traverse all codes for user to identify the right code. If the model name is incorrect or left blank, it will show all available code for the brand.

\*\* When confirm signals, please point the Red part of Smart Page 8 W towards the device you are trying to control just like a standard remote control.

- IR Learning

-If you want customized remote, please select "Customize" when selecting Brand.

-Once installed, it will show learning function interface. Each button needs be assigned a signal with IR Learning process by touching it until tapping "Finish" button.

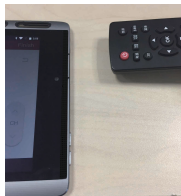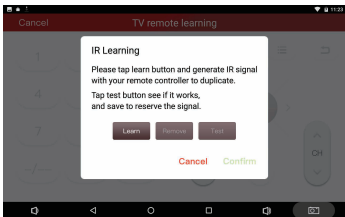


-Please point your original remote controller with the Red part of Smart Page 8 W like right picture And follow on-screen instructions to configure the device.

-Please check if your device is working just like original remote controller with "Test" button. If not, please tap "Learn" button and repeat several times until it works. Tap "Confirm" to save the changes.

### 3.19.3 Reservation

 -You can make scheduled Power On, Off and toggle on your device with IR control. This allows you to generate an IR signal at a specific time. If you need other signal for reservation, please use IR leaning function to make your signal first.

Reservation List											
Monday											
Tuesday											
Wednesday											
Thursday											
Friday											
Saturday											
Sunday											
		15	16	17	18	19	20	21	22		

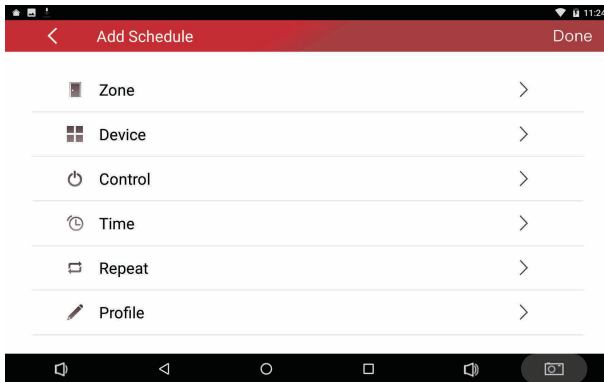


- Reservation Setup
  - Reservation is just like Alarm app. The difference is we have assign a IR signal rather than a melody. Please install required IR signal with "IR Universal remote Initial Configuration" process before reservation setup.
  - From the menu tap "Schedule" → Select '+' → Select Zone → Select Device → Select Signal \* → Select Time → Save reservation with tap 'Done'.
  - \* "Power On" signal makes the device always on. "Power Toggle" signal is used to toggle power signal On and Off.
  - Please make sure "Mobile Client Setup" process is done if you want receive notification on mobile.

### 3.19.4 Mobile Client Setup

 -“Mobile Client Setup” is a pairing process. It allows you to establish connection between Smart Page 8 W and mobile device. Smart Page 8 W and “Home Control Client” in mobile device can be connected with QR code scan. Please follow on-screen instructions to connect the device.

-Download & install “Home Control Client” in the mobile if not installed. You can download the “Home Control Client” application in Google PLAY Store with Keyword PLDT and Auratech.


-From the main menu tap “Remote Setup” → tap QR code

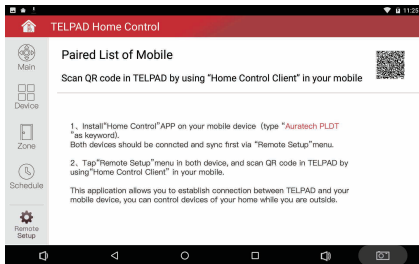

-Execute “Home Control Client” → tap Setting → “Remote Setup” (in the Mobile, not Smart Page 8 W)

-Pair Smart Page 8 W and mobile with QR code scan.

 
-Please provide Smart Page 8 W with continuous power supply for Out-HomeControl.

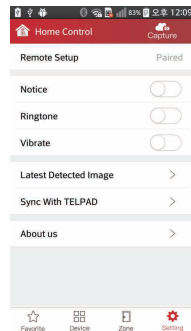



### 3.19.5 Out Home Control

 Smart Page 8 W provides Out Home mobile remote control feature. All you have to do is pairing your mobile and Smart Page 8 W. You can control your home device like air-conditioner or IR controllable light system with your android mobile from Anywhere with your 4G or WIFI connection. If you want check the result. Of course, Smart Page 8 W can be provided with remote camera for home monitoring

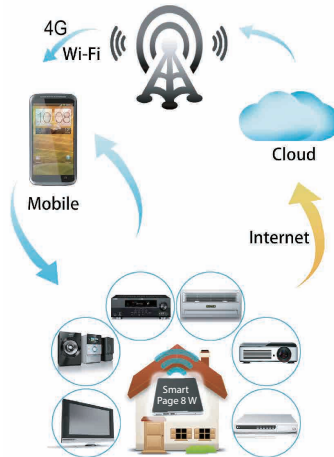



- Please make sure "Mobile client Setup" process is done if you want out home control.
- From the main menu in you "Home Control Client" tap Setting → tap "Sync With Smart Page 8 W". Once downloaded, "Home Control Client" can control Smart Page 8 W with IR Remote menu (Select Zone → tap " Remote Name" → tap required signal).
- From the main menu in your "Home Control Client" tap "Capture" for request Smart Page 8 W Camera still image. (Please tap "Tap to connect", if it is not appear.)
- Please follow on-screen instructions and wait for seconds until a still image pop-up.
- See the image and Tap <Back> key to return to main menu.
- Only the latest captured image (Automatically replace with new one) will be stored in the server with security code algorithm.
- Please provide Smart Page 8 W with continuous power supply for operation.

-NOTE: The Out-home control function may not be worked properly depending on the client mobile device, unstable network environment, network rining or Internet service company. The Out-home control function works only on Android device which is equipped with Google service. The push message used for Out-home control is provided by google™, GCM message not guarantee high percentage of delivery. User needs to retry if the message is not delivered due to various reason. User has to carefully manage the connection between "Home Control Client" and Smart Page 8 W, as "Home Control Client can monitor Smart Page 8 W.


### 3.19.6 Motion Detection

  - "Motion detection" feature will take and send photo of what it is in front of Smart Page 8 W. You can use it for intruder detection. Smart Page 8 W built-in camera is used as a motion detection triggers. It will provide notifications to your mobile with capture images.

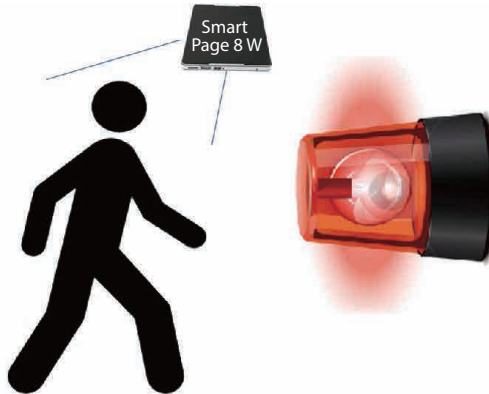

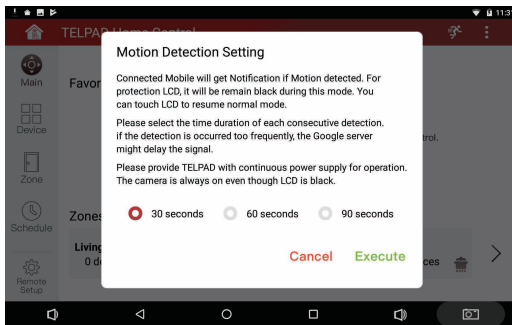

- Motion detection

- Please make sure "Mobile Client Setup" process is done if you want receive notification on mobile.
- From the main menu in Smart Page 8 W, please tap , "Motion Detection" and follow on-screen instructions. The notification will be forwarded to the connected mobile once started. If Smart Page 8 W camera faces continuous change, it will not send all of the pictures (Send 1 notification per about 30 seconds).
- Please provide Smart Page 8 W with continuous power supply for operation. The camera is always on even though LCD is black.

Note:

The app will allow the user to share the captured images via Gmail, bluetooth etc.  
The images are automatically saved in the Auradata on both devices.

## 3.20 Home Care

### Terms of Use

 
The Home Care APP utilize various health related data you enter. Your data are stored and accessed by Smart Page 8 W Home Care only and are not transferred to or stored on any servers. The calculated forecasts of Home Care may not be accurate and should not be used to prevent unwanted pregnancy. The forecast accuracy depends on a number of factors including how regular one's cycle length is, how many periods have been measured with the app. Anxiety, stress, age and other factors can also affect one's cycle from month to month. The measured temperature accuracy depends on the operating method of iFever Manager.

This App and devices is not for clinical or medical use.

### Installation of "Home Care" App

Find and tap the "Home Care Link" icon in Smart Page 8 W Apps, an option box pops up, select "OK". After user logs in his (her) Google account, Smart Page 8 W screen will jump to "Google Play Store". If the user's "Google Play Store App" is not the latest version, the "Google Play Store App" will exit and update automatically. Click "Home Care Link" again, "Google Play" will enter the latest version and user can download and install "Home Care App".

Remark: This usage may be changed without notification upon application update.

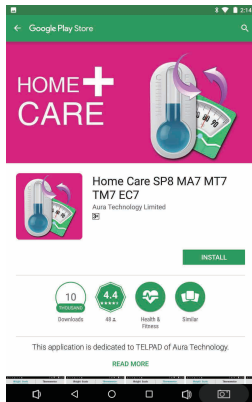




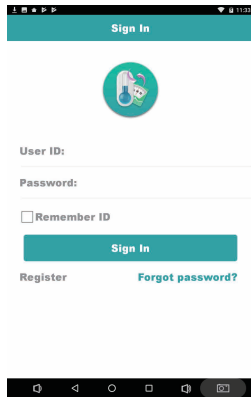 
This section contains a description of Home Care application which is working with 'iFever manager" dongle. iFever Manager enables your Smart Page 8 W for body temperature measurement. You can keep history of your family temperature for a long time.

If your baby gets a fever, you can show doctor with the daily graph screenshot. (Show body temperature variation based on time axis)

 
 
If you are female, Smart Page 8 W monthly view can help you to keep track of your fertility/menstrual cycles. Just measure temperature each morning per day, and then Smart Page 8 W does the rest.

With Monthly view, you can monitor your average body temperature and keep your body healthy. Average body temperature of a healthy adult is 36.50-36.80°C. But, average daytime body temperature of a healthy adult is above 37°C. Cancer patients have low body temperature, usually less than 36°C.

1. From the Home screen, tap  → 
2. If you are using this application for the first time, please tap the register button to add your ID and password. If the screen is not for temperature measurement, please tap  at the top right corner of the screen.
3. Insert your home care hardware - iFever Manager dongle in Audio jack.





4. Tap the Start button or volume up hard key to begin temperature measurement.
5. Please move your iFever Manager sensor part close to your (or others) forehead position during three seconds. Measured distance is within 1 cm.
6. Please see the measured value, and tap the save button to store the data. Tap Clear button to clear last measured value if needed.
7. Supported body Temperature range is from 34.3° C to 43.1° C. It will not save the data if out of range occurs.

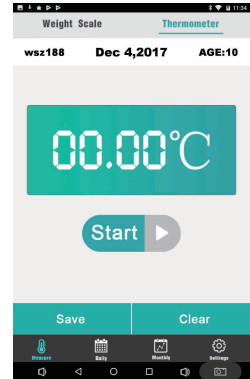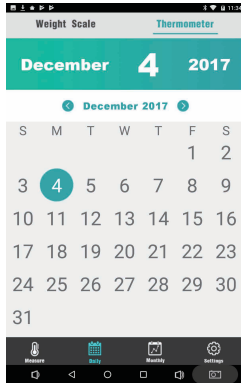

8. You can see the measured data, and time in Daily tab by pressing the date. Monthly tab can show you a graph with your accumulated data. (See Appendix 1, 2, 3 and 4 for more description)


## Appendix 1.Daily Graph

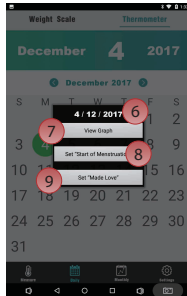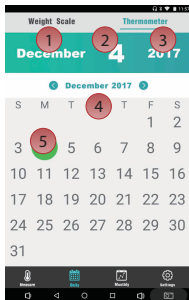  

No	Item	Description
1	Last month button	Move to previous month
2	Calendar title	Display current date
3	Next month button	Move to next month
4	No measured data	If no measured data, will be displayed with pale sky blue
5	Today	Today is Green background
6	Selected date	This date can be selected when user touched *
7	View Graph	Display temperature data with graph
8	Start of menstruation	Mark as menstruation start date.On/ Off Start menstruation date
9	Made love	On/ Off record for the event (For information only)

 
\* If Basal body temperature option is not ON in the Setting menu, No 7, 8, 9 menus will not be displayed, and if user selects a date it will show Graph View.



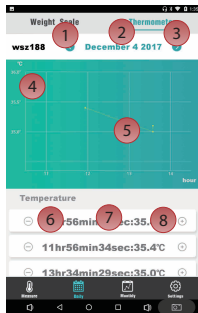


No	Item	Description
1	Last month button	Move to previous Month
2	Calendar title	Display current date
3	Next month button	Move to next Month
4	Measured range	Measured temperature data range
5	Temperature graph	Show the measured data with line
6	Temperature delete button	Delete selected temperature data
7	Temperature time	Show measured time and data
8	Add memo	Move to Add memo window
9	Temperature value	Show temperature and time for adding memo
10	Back button	Back to previous screen
11	Memo content	Show Memo
12	Delete memo	Delete Memo

## Appendix 2. Monthly Graph

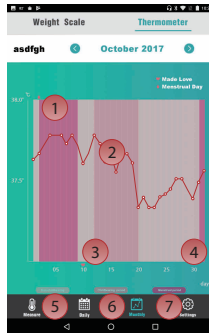 

No	Item	Description
1	Start menstruation	First day of menstruation (Marked in Daily graph)
2	Graph	Show graph with temperature
3	Made love	Made love date (Marked in Daily graph)
4	Y axis	Date for the month
5	Non-Childbearing	Indicate non Childbearing period
6	Childbearing period	Indicate Childbearing period
7	Menstrual period	Indicate Menstrual period


## Appendix 3. Setting

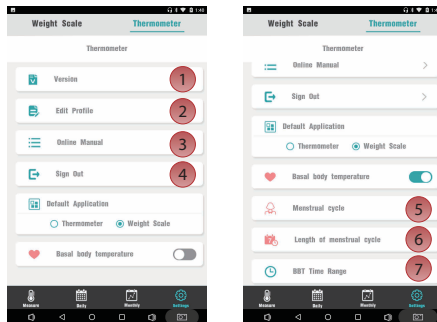 


No	Item	Description
1	Version	Show software version number & release date
2	Edit Profile	Edit account information
3	Online Manual	Check online user manual
4	Sign out	Logout for another user login
5	Menstrual cycle	Menstrual cycle can be set up to 20-40 days
6	Length of menstrual cycle	Menstrual period can be set up to 1-7 days
7	BBT Time Range	Setting time range for BBT temperature measurements (00:00 ~ 23:59)

#### Appendix 4. Basal body temperature

 Basal body temperature (BBT) is our lowest temperature during rest, which is usually during the time we're sleeping. This is the reason why BBT should be taken before getting out of bed for accurate fertility charting. Ovulation causes one half to one-degree rise in BBT, so monitoring BBT helps provide information on the best time for conception.

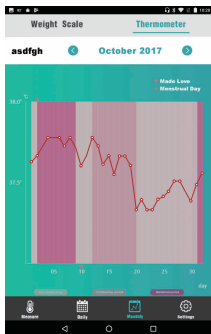

Normal temperature

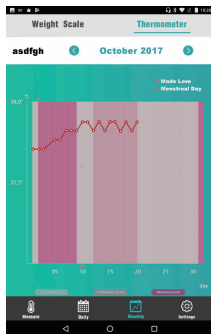 

pregnancy temperature

#### Note:

The calculated forecasts of Home Care may not be accurate and should not be used to prevent unwanted pregnancy. The forecast accuracy depends on a number of factors including how regular one's cycle length is, how many periods have been measured with the app. Anxiety, stress, age and other factors can also affect one's cycle from month to month.

#### Remark:

If user forget his(her) password, click "forget password" on login interface to retrieve the password via the E-mail written down when registered account.

### 3.21 Cast Screen Function Operation Guide

Smart Page 8 W Tablet supports Cast Screen. It can be connected to larger screen tablet pc, TV, projector and other multimedia equipments through wireless connection. It has realized that the same files can be displayed on the multi-platform. End users can push the images, videos or other files to display and share on the larger screen TV.

The button Cast Screen has been added on Smart Page 8 W tablet, which has greatly improved the play fluency. The phenomenon of play-out delay and frame reducing won't happen. Consumers can enjoy 1080P hi-def video and the best audiovisual effects on TV, and live a freer entertainment life and own the convenient environment in our internet era.



1. Connect wireless transmission equipment "Wireless HDMI" to the HDMI port of displayer or TV, and plug in 5V power supply.
2. Set displayer or TV in " HDMI" mode and Wireless HDMI in mode of "Miracast" .
3. Make sure you have connected Wi-Fi of tablet firstly, access tablet "Setting" and tap "Display". (Figure 1)

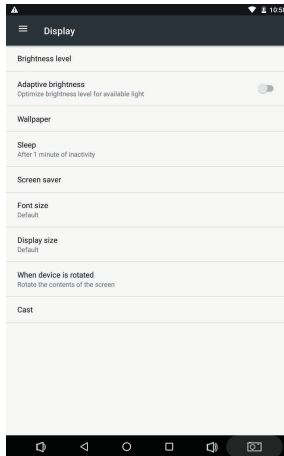 


Figure 1

4. And then press "Cast" same as Figure 2 below.

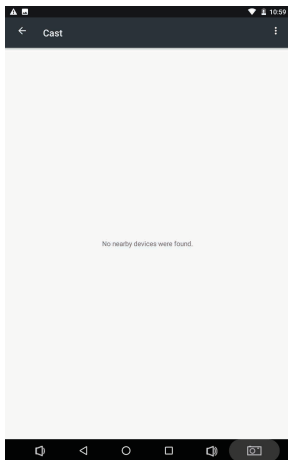 


Figure 2

5. Select “Enable wireless display” in menu at top right corner. ( Figure 3 )

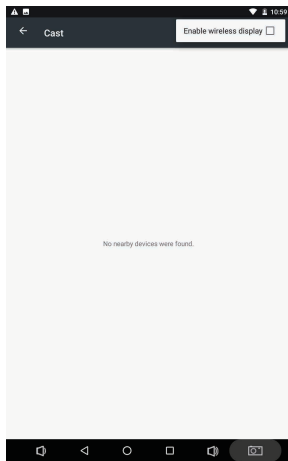 


Figure 3



6. Tablet will search the accessible signal sources in range automatically. (Figure 4)

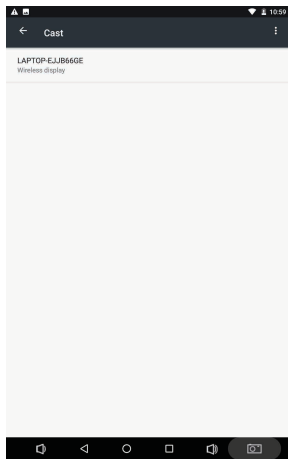 


Figure 4

7. Select the corresponding signal source and wireless connection shows successfully.(Figure 5)

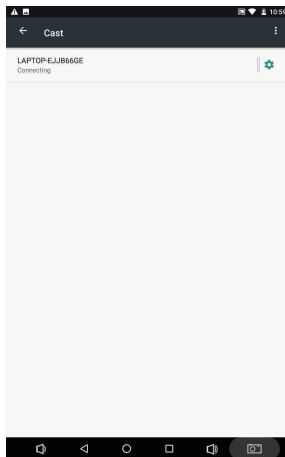 


Figure 5

Notes: Wireless HDMI is needed for this function.



<p>How will my device receive notifications from the tablet?</p>	<p>Your device must be connected to the tablet via Bluetooth pairing. Once connection is established ,tablet will send notifications with attached captured images (internet connection is required for both party).</p>
<p>There is no sign when tablet is charged by adaptor.</p>	<p>Solution: -Check cable and adapter connections.</p>
<p>Inserted micro SD card is unrecognizable</p>	<p>Cause: It may be the poor contact between SD card and tablet or SD card has been damaged. Solution: - Please pull SD card out and re-plug it into tablet; - Please change another good SD card; - Please restart tablet and re-plug SD card.</p>
<p>The camera can't capture photos.</p>	<p>Cause: It may be caused by the wrong configuration of cameras. Solution: - First check camera settings,Then close, the camera then restart.</p>
<p>Bluetooth can't be paired with other devices.</p>	<p>Cause: Bluetooth setting is incorrect or bluetooth is hidden. Solution: Check bluetooth settings; Set the bluetooth of the device to "visible to other devices."</p>
<p>Unresponsive tablet's touch panel.</p>	<p>Cause: tablet may be on standby mode or tablet is locked. Solution: Unlock the tablet in case is still unresponsive try to restart the tablet.</p>

<p>The tablet can't be turned on</p>	<p>Cause: It may be caused by the low battery of tablet or the power key has been damaged.  Solution:  Please check if power key has been damaged or not;  Please recharge tablet with adaptor firstly. And press power key once "in recharge" remark is showing on tablet.</p>
<p>Home Control Feature</p>	<p>Does the Home control application support all television brands and models?  Answer: Home control supports most "popular" brands and models.</p>
<p>Home Control Reservation Setup</p>	<p>Question:My Reserved controlled Setup did not take effect,What is wrong with my device?  Solution:Check the following settings if properly configured  Time →Zone →Device → Signal → exact day of week and also check the Line Of Sight between the tablet and the device to be controlled(since the technology used is Infrared transmission there must be Line of Sight between devices approximately 10 meters).</p>



Please read the following instructions carefully. Abide by the safety warnings described in order to use the device safely and properly as it is designed for. These instructions apply to the whole device including all the accessories.

#### Basic Requirements

- Keep the device dry at all times and prevent from any collision with other objects, including during storage, transportations, and usage of the device.
- Please do not disassemble the device in any case. Contact an authorized service center for repair and/or assistance of any kind.
- An organization or individual cannot change the mechanical, safety, or performing design of the device without authorization.
- Please abide by all related laws and regulations, and respect the legal rights of other people when using the device.
- When making a call, please do not touch the pogo pin connector in the dock.

#### Environmental Requirements for Using the Device

- Before connecting and disconnecting cables, stop using the device, and then disconnect it from the power supply. Ensure that your hands are dry during operation.
- Keep the device far from sources of heat and fire, such as a heater or a candle.
- Keep the device far from electronic appliances that generate strong magnetic or electric fields, such as a microwave oven or a refrigerator.
- Place the device on a stable surface.
- Place the device in a cool and well-ventilated indoor area. Do not expose the device to direct sunlight.
- Keep the ambient temperature between 0°C and 35°C while the device is being charged.
- Keep the ambient temperature between 0°C to 40°C for using the device powered by a battery.
- Do not block the openings on the device with any object. Reserve a minimum space of 10 cm around the device for heat dissipation.
- Do not place any object (such as a candle or a water container) on the device. If any foreign object or liquid enters the device, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.
- During thunderstorms, power off the device, and then remove all the cables connected to it to prevent it from getting damaged due to lightning strikes.

- ⊗ Never install telephone wiring during an electrical storm
- ⊗ Never install telephone line jacks in wet locations unless the jack is specifically designed for wet locations.
- ⊗ Never touch exposed (insulation broken) telephone wires or terminals unless the telephone line has been disconnected at the network interface

#### Precautions for Using Wireless Devices

- ⊗ When using the device, ensure that the antenna of the device is at least 20 cm away from all persons.
- ⊗ Do not use the device where using wireless devices is prohibited or may cause interference or danger.
- ⊗ The radio waves generated by the device may interfere with the operation of electronic medical devices. If you are using any electrical medical device, contact its manufacturer for the restrictions on the use of the device.
- ⊗ Do not take the device into operating rooms, intensive care units (ICUs), or coronary care units (CCUs).

#### Areas with Inflammables and Explosives

- ⊗ Do not use the device where inflammables or explosives are stored, for example, in a gas station, oil depot, or chemical plant. Otherwise, explosions or fires may occur. In addition, follow the instructions indicated in text or symbols.
- ⊗ Do not store or transport the device in the same box as inflammable liquids, gases, or explosives.

#### Accessory Requirements

- ⊗ Use only the accessories supplied or authorized by the device manufacturer. Otherwise, the performance of the device may be affected, the warranty for the device or the laws and regulations related to telecommunications terminals may become null and void, or an injury may occur.
- ⊗ Do not use the power adapter if its cable is damaged. Otherwise, electric shock or fire may occur.
- ⊗ Ensure that the power adapter meets the specifications indicated on the device nameplate.
- ⊗ For electric plugs, the socket-outlet should be installed near the device and should be easily accessible.

#### Battery and Charger

- ⊗ Unplug the charger from the electrical plug and the device when not in use.
- ⊗ The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the original time, replace the battery.



- ⦿ Use the appropriate power supply defined in the specifications of the charger. An improper power voltage may cause fire or of the charger.
- ⦿ Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- ⦿ Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- ⦿ If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- ⦿ If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or a fire.
- ⦿ If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- ⦿ Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- ⦿ Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

#### Prevention of Hearing Damage

- ⦿ Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

#### Safety of Children

- ⦿ Keep the device and its accessories out of the reach of children. Otherwise, they may damage the device and its accessories by mistake, or they may swallow the small components of the device, causing suffocation or other dangerous situations.

Maintenance if the device is not used for a long time, power it off, and then remove all connected cables.

- ⦿ If any exceptional event occurs, such as if the device emits smoke, unusual sounds or smells, stop using the device immediately, power it off, remove all the cables connected to it, and then contact an authorized service center.

- If the device screen is damaged, do not touch or try to remove the broken part. In this case, stop using the device immediately, and then contact an authorized service center in time.
- Do not trample, pull, or over bend any cable. Otherwise, the cable may get damaged, causing malfunction of the device.
- Before cleaning the device, stop using it, power it off, and then remove all the cables connected to it.
- Use a clean, soft, and dry cloth to clean the device shell. Do not use any cleaning agents or sprays.

#### Emergency Call

- You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions.  
You should not rely solely on the device for essential communications.



#### Disposal and Recycling Information

This symbol on the device (and any included batteries) indicates that the device (and any included batteries) should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of its life. For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.



The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Several measures are recommended to help you protect personal and confidential information.

- Place your device in a safe area to prevent it from unauthorized use.
- Set your device screen to lock and create a password or unlock pattern to open it.
- Periodically back up personal information kept on your memory card, or stored in your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- If you are worried about viruses when you receive messages or emails from a stranger, you can delete them without opening them.
- If you use your device to browse the Internet, avoid websites that might pose a security risk to avoid theft of your personal information.
- If you use services such as Wi-Fi tether or Bluetooth, set passwords for these services to prevent unauthorized access. When these services are not in use, turn them off.
- Install or upgrade device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- To secure your personal information and downloaded applications, it is highly suggested that the user downloads appropriate security and/or anti-virus applications.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Your device may provide detection and diagnostic information to third-party application providers. Third party vendors use this information to improve their products and services.



Copyright © 2014 by AURA Technology Limited.

All rights reserved. No part of this document may be reproduced, distributed, or transmitted in any form or by any means without prior written approval of AURA Technology Limited.

For the device explained in this manual may contain copyright software of AURA Technology Limited. and other possible licensors.

No person shall not or is permitted in any manner to reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the software, unless such restrictions are outlawed by related laws or permitted by individual copyright holders.

#### Notice

Depending on the capacities and settings of the local network, there may be some limitations to using certain software. Thus the functions of the device that rely on certain software might be not fully available or not able to activate. The descriptions enlisted thus may not exactly be reenacted within the device and the accessories purchased.

Changes or modifications to the manual may occur without previous notifications or without any liability, by the right reserved to AURA Technology Limited.

#### Third-Party Software Statement

Any intellectual properties, software, applications of the third-party that are provided with the device are not owned by AURA Technology Limited. Thus there will be no responsibility or liability held towards AURA Technology Limited. for the functions of the software and applications along with warranties and/or support for them. Third-party software and applications services may be changed or concluded at any time. AURA Technology Limited. to the degree allowed by related laws, states that it will not be responsible, liable, or compensate for the services provided by third-party providers. Any aspects of any software and application installed and used on the device, AURA Technology Limited. shall not be held responsible or reliable such as legitimacy or quality of the software/application. The users shall accept the risk of any results caused by the software/application being possibility incompatible with the device. This device runs on Android operating system but there has been appropriate changes made by AURA Technology Limited. Thus this device might not fully support all the functions supported by standard Android operating system. AURA Technology Limited. shall not be liable for any related situations.

#### Trademarks and Permissions

All the trademarks, products, services and company names mentioned are the property of their respective owners



The information within this manual are provided "AS IS", except required by applicable laws, no warranties of any kind; either expressed or implied, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability, or information of this manual.

#### LIMITATIONS OF LIABILITY

In no event shall AURA Technology Limited. be liable for any special, incidental, indirect, or consequential damages or lost profits, business, revenue, data, goodwill or anticipated savings, that arises from the use or misuse of the device. (This limitation shall not apply to liability for personal injury to the degree applicable law rules out such limitation.)





## A

- About Your Smart Page 8 W, 02
- Accessing the Settings , 19

## B

- Bluetooth, 26

## C

- Charging the Battery, 10
- Connecting or Disconnecting from a Computer Using USB , 23
- Cast Screen Function Operation Guide, 56
- Camera Instructions, 32

## D

- DISCLAIMER OF WARRANTIES, 74

## E

- E-mail , 30

## F

- FAQs, 62

## G

- GETTING STARTED, 01
- Getting to Know Your Smart Page 8 W, 04
- Google Services, 28

## H

- Home Screen, 14
- Home Control, 37
- Home Care, 48

## I

- Inputting Text, 17
- Installing or Removing the MicroSD Card , 22
- INDEX, 76

## L

- Locking and Unlocking the Screen, 16
- Languages & Input Method & Account Setting , 20
- LEGAL NOTICE, 72

## O

- Opening and Switching Applications, 19

## P

- Product Specification, 06
- PERSONAL INFORMATION AND DATA SECURITY, 70

## S

- SMART PAGE 8 W INTRODUCTION, 03
- Setting the Date and Time, 21

## T

- TABLET FUNCTIONS, 09
- Turning the Tablet ON or OFF, 10

## U

- Using the Touch Screen, 13

## W

- Working with the Keys, 12
- Wireless Networks, 24
- WARNINGS AND PRECAUTIONS, 65

## Warranty card

NAME:	
TEL. NO.:	
ADDRESS:	
DATE OF PURCHASE:	
VERSION:	
SERIAL NO.:	



## Smart Page 8 W USER MANUAL

AURA Technology Limited

FLAT 810,8/F STAR HOUSE, 3 SALISBURY ROAD, TSIMSHATSUI, KOWLOON HONGKONG

E-mail: [Support@auratech.hk](mailto:Support@auratech.hk)

for Android™ Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.